C3119

14A005

M117
Power window motor, right rear (23394)



Pin	Circuit	Circuit function
1	319 (YE/BK)	Window switch, right rear, +/–
2	320 (RD/BK)	Window switch, right rear, +/–

C3120

14A005

Y260
Subwoofer, left rear



F02071

Pin	Circuit	Circuit function
1	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer, +
2	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer, –

C3121

14A005

Y261
Subwoofer, right rear



F02071

Pin	Circuit	Circuit function
1	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer +
2	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer –

C4062

14A005

M271
Convertible top motor



F02088

Pin	Circuit	Circuit function
1	903 (RD)	Convertible top motor, to, Convertible top raise relay
2	902 (YE)	Convertible top motor, to, Convertible top lower relay

C4063

14A005

K366
Convertible top raise relay

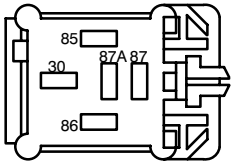

F05062

Pin	Circuit	Circuit function
30	903 (RD)	Convertible top motor, to, Convertible top raise relay
85	977 (VT/WH)	Brake indicator, control
86	588 (VT)	Convertible top switch, to, Convertible top raise relay
87	170 (RD/LB)	Voltage supplied at all times (overload protected)
87A	1205 (BK)	Ground