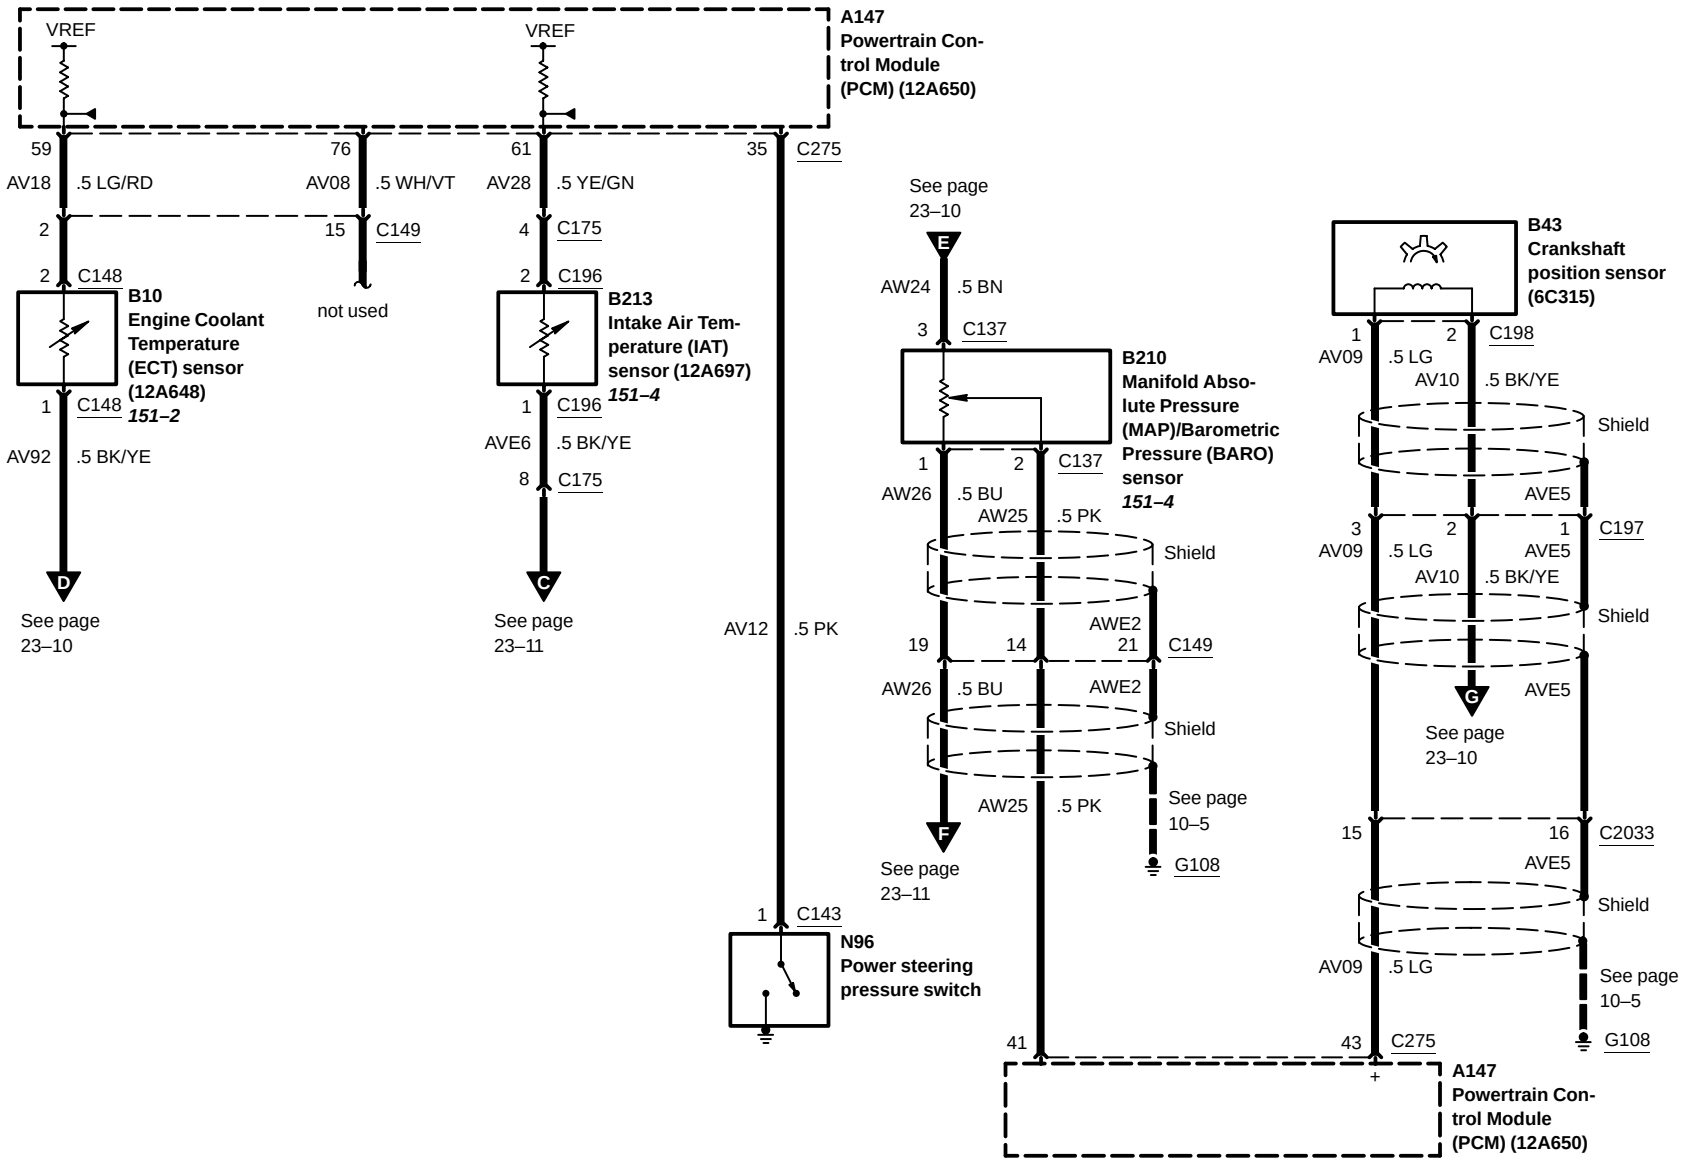
A147
Powertrain Control Module (PCM) (12A650)
VREF
VREF
59
AV18
.5 LG/RD
76
AV08
.5 WH/VT
61
AV28
.5 YE/GN
35
C275
2
2
C148
15
C149
4
C175
2
C196
B10
Engine Coolant Temperature (ECT) sensor (12A648)
151–2
not used
B213
Intake Air Temperature (IAT) sensor (12A697)
151–4
1
C148
AV92
.5 BK/YE
1
C196
AVE6
.5 BK/YE
8
C175
D
C
See page 23–10
See page 23–11
AV12
.5 PK
1
C143
N96
Power steering pressure switch
See page 23–10
E
AW24
.5 BN
3
C137
B210
Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) sensor
151–4
1
2
C137
AW26
.5 BU
AW25
.5 PK
Shield
19
14
AWE2
21
C149
AW26
.5 BU
AWE2
Shield
AW25
.5 PK
See page 10–5
G108
F
See page 23–11
B43
Crankshaft position sensor (6C315)
1
2
C198
AV09
.5 LG
AV10
.5 BK/YE
Shield
AVE5
3
2
1
C197
AV09
.5 LG
AVE5
AV10
.5 BK/YE
Shield
G
AVE5
See page 23–10
15
16
C2033
AVE5
Shield
AV09
.5 LG
See page 10–5
G108
41
43
C275
+
A147
Powertrain Control Module (PCM) (12A650)