C701

14A005

N111
Window adjust switch, left rear (14A412)

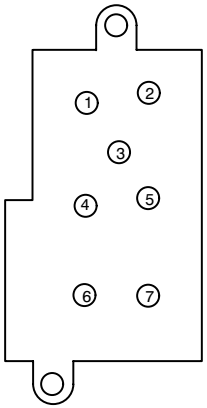

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	316 (YE/LB)	Window switch, feed, left rear, Up
3	170 (RD/LB)	Window lockout, switched power, output
4	317 (GY/OG)	Window switch, feed, left rear, Down
5	333 (YE/RD)	Window motor, feed, Up
6	57 (BK)	Ground
7	484 (OG/BK)	Headlamp switch, on input

C703

14A005

M116
Power window motor, left rear (23394)



F02387

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down

C704

14A005

M116
Power window motor, left rear (23394)

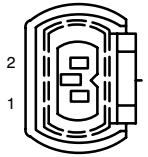

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C715a

14A005

N237
Door ajar switch, driver side rear (14018)



F01053

Pin	Circuit	Circuit function
1	627 (BK/OG)	Door ajar indicator, control

C715b

14A005

N237
Door ajar switch, driver side rear (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground