C3076

VJ9241

A270
Video cassette player



F12119

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	16 (YE/WH)	Voltage in Run or Accessory (overload protected)
3	18 (BK)	Voltage supplied at all times (overload protected)
4	–	not used
5	–	not used
6	255 (PK/DG)	Rear Seat Entertainment (RSE) module, to, Video cassette player
7	245 (YE/RD)	Rear Seat Entertainment (RSE) module, to, Video cassette player
8	235 (BK/LG)	Ground
9	225 (DB/RD)	Rear Seat Entertainment (RSE) module, to, Video cassette player
10	215 (BK/LG)	Ground
11	205 (BK/WH)	Rear Seat Entertainment (RSE) module, to, Video cassette player
12	195 (OG/BK)	Rear Seat Entertainment (RSE) module, to, Video cassette player

C3077a

VJ9241

A267
Rear Seat Entertainment (RSE) module

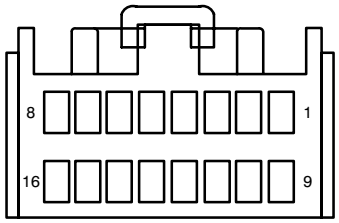

F20039

Pin	Circuit	Circuit function
1	57 (BK/LG)	Ground
2	15 (TN/WH)	Speaker, left rear (18808) +
3	25 (GY/LB)	Speaker, left rear (18808) +
4	35 (TN/YE)	Speaker, left rear (18808) –
5	57 (BK/LG)	Ground
6	65 (BN/PK)	Speaker, right rear (18808) –
7	55 (OG/RD)	Speaker, right rear (18808) +
8	45 (TN/LG)	Speaker, right rear (18808) +
9	19 (LG/RD)	Voltage supplied at all times (overload protected)
10	19 (BK)	Ground
11	–	not used
12	75 (LB/PK)	Audio corporate protocol A
13	85 (TN)	Audio corporate protocol B
14	57 (BK/LG)	Ground
15	16 (LG/PK)	Power choke 1
16	23 (LG/BK)	Audio System ON (ASYSON)