C467

14335

A162
Display assembly, auxiliary warning system

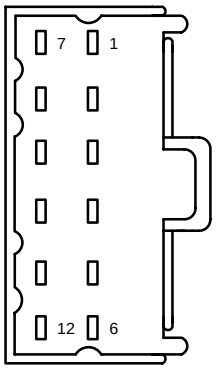

F12019

Pin	Circuit	Circuit Function
1	31S-GC10 (BK/RD)	Ground, switched
2	31S-GE7B (BK/YE)	Ground, switched
3	–	not used
4	–	not used
5	–	not used
6	15-GE42 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
7	91-GE42 (BK/YE)	Ground
8	31S-GE54 (BK/BU)	Ground, switched
9	31S-GE18 (BK/WH)	Ground, switched
10	31S-GE13 (BK/RD)	Ground, switched
11	–	not used
12	–	not used

C469 (NA)

14K024

N14
Heater blower switch

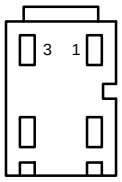

F04028

Pin	Circuit	Circuit Function
1	31S-FA32 (BK/BU)	Ground, switched
2	31S-FA3 (BK/BU)	Ground, switched
3	31S-FA31 (BK/YE)	Ground, switched
4	31-FA25 (BK)	Ground

C470

14K024

R21
Heater blower series resistor

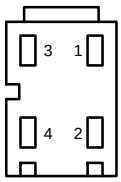

F04029

Pin	Circuit	Circuit Function
1	31S-FA2 (BK/BU)	Ground, switched
2	31S-FA31 (BK/YE)	Ground, switched
3	31S-FA30 (BK)	Ground, switched
4	31S-FA32 (BK/BU)	Ground, switched