C220b (BK)

14401

Instrument cluster

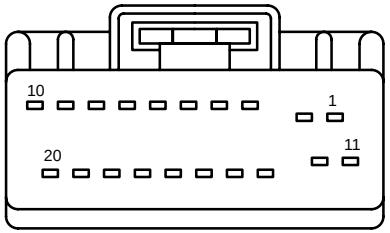

F20020

Pin	Circuit	Circuit function
1	1393 (LB/RD)	Turn lamps, feed, left front
2	1357 (LB/YE)	Fuel pump/fuel gauge sender, return
3	608 (BK/YE)	Air bag indicator, control
4	1356 (LG/VT)	Fuel pump/fuel gauge sender, input
5	31 (WH/RD)	Engine oil pressure indicator, control
6	231 (BK/YE)	Message center switch to Instrument cluster
7	693 (OG)	UBP Diagnostics
8	914 (TN/OG)	SCP Bus +
9	915 (PK/LB)	SCP Bus –
10	234 (DB/WH)	Ambient air temperature sensor (19E702), return
11	1205 (BK)	Ground
12	235 (RD/BK)	Instrument illumination, input
13	12 (LG/BK)	Power, Hot with High Beams on
14	–	not used
15	1414 (LG/VT)	voltage applied, Key In, Ignition switch (11572)
16	703 (WH/OG)	Compass data +
17	702 (WH/BK)	Compass data –
18	295 (LB/PK)	Voltage in Run or Accessory (overload protected)
19	233 (DB/YE)	Ambient air temperature sensor (19E702), feed
20	–	not used

C226 (WH)

14401

Steering position sensor (18B015)

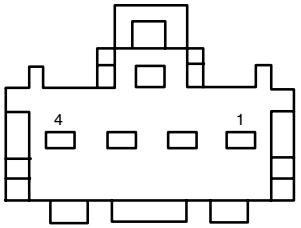

F04349

Pin	Circuit	Circuit function
1	1003 (GY/YE)	Sensor Power
2	1573 (YE)	steering angle 2
3	1572 (DG)	steering angle 1
4	1571 (BK)	steering angle Ground