C433 (BK)

14407

Fuel tank unit (9H307)

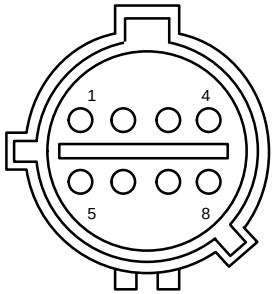

F08052

Pin	Circuit	Circuit function
1	–	not used
2	351 (BN/WH)	Reference, voltage
3	359 (GY/RD)	signal, return
4	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
5	1357 (LB/YE)	Fuel pump/fuel gauge sender, return
6	787 (PK/BK)	Fuel pump, Power
7	1205 (BK)	Ground
8	1356 (LG/VT)	Fuel pump/fuel gauge sender, feed

C439 (BK)

5K762

Trailer tow connector (15A416)

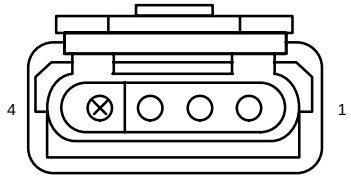

F04211

Pin	Circuit	Circuit function
1	206 (WH)	Trailer tow connector (15A416), Ground
2	962 (BN/WH)	Trailer tow relay, switched output
3	52 (YE)	Turn lamps, feed, left rear
4	64 (DG)	Turn lamps, feed, right rear

C440 (BK)

14407

Wheel speed sensor, left rear

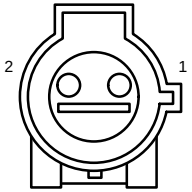

F02085

Pin	Circuit	Circuit function
1	518 (LG/RD)	Wheel speed sensor, left rear +
2	519 (LG/BK)	Wheel speed sensor, left rear –

C450 (BK)

14407

Evaporative emission (EVAP) canister vent valve (9F945)

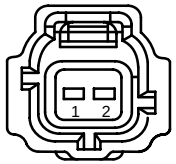

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C451 (GN)

13B431

Reversing lamp, left (13411)

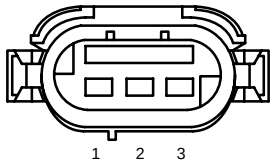

F03099

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse