C914

14334

A217
Rain sensor module

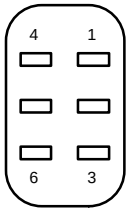

F006181

Pin	Circuit	Circuit function
1	8-KA41 (WH/GN)	Sensor signal
2	–	not used
3	10-KA41 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
4	7-KA41 (YE/GN)	Sensor signal return (reference/ground)
5	–	not used
6	20-KA41 (PK/BK)	Voltage, hot in run only

C915

14334

N417
Emergency message switch

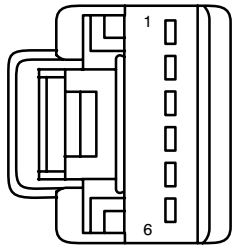

F006179

Pin	Circuit	Circuit function
1	10-GP6 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
2	9-GP6 (BN/RD)	Sensor signal return (reference/ground)
3	–	not used
4	31-GP6 (BK)	Ground
5	64S-GP6 (BU/RD)	Variable DC voltage (not overload protected), Switched
6	8-GP6 (WH/RD)	Sensor signal

C920

15C670

M201
Roof opening panel motor assembly (15790)

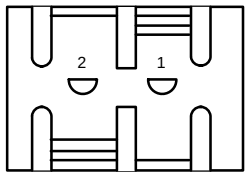

F02121

Pin	Circuit	Circuit function
1	32-AG6 (WH)	Switched between: Battery voltage, Ground or Open
2	33-AG6 (YE)	Switched between: Battery voltage, Ground or Open