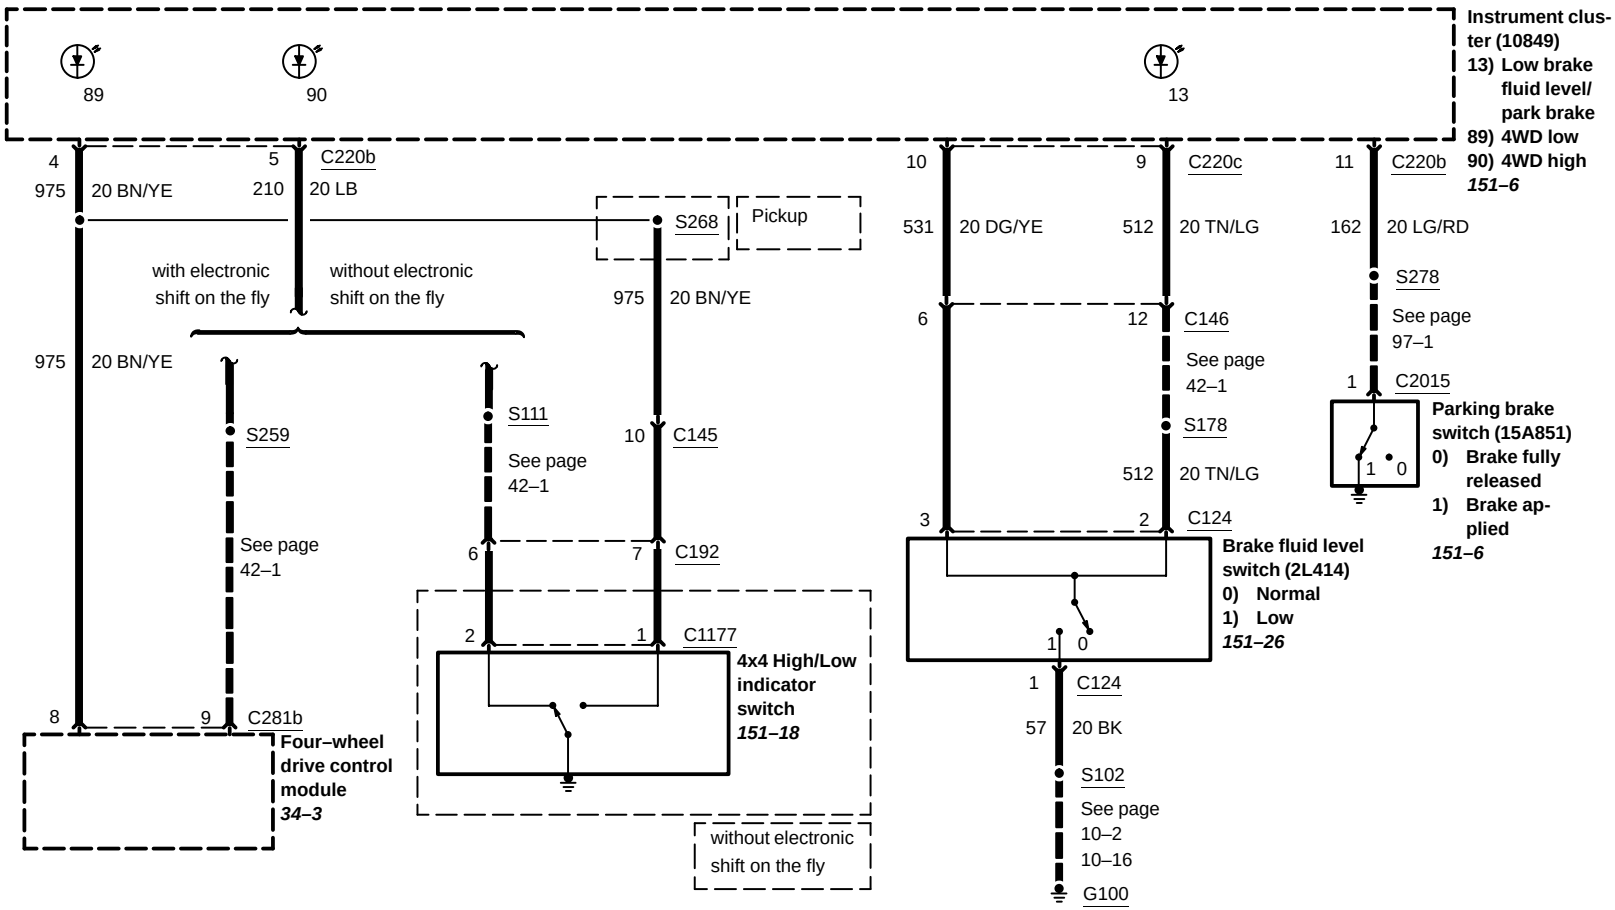
89
90
13
Instrument cluster (10849)
13) Low brake fluid level/ park brake
89) 4WD low
90) 4WD high
151–6
4
975 20 BN/YE
5
210 20 LB
C220b
with electronic shift on the fly
without electronic shift on the fly
S268
Pickup
975 20 BN/YE
975 20 BN/YE
S259
See page 42–1
S111
See page 42–1
10 C145
6
7 C192
2
1 C1177
4x4 High/Low indicator switch
151–18
8
9 C281b
Four–wheel drive control module
34–3
without electronic shift on the fly
10
531 20 DG/YE
9
512 20 TN/LG
C220c
6
12 C146
See page 42–1
S178
512 20 TN/LG
3
2 C124
Brake fluid level switch (2L414)
0) Normal
1) Low
151–26
1 0
1 C124
57 20 BK
S102
See page 10–2
10–16
G100
11
C220b
162 20 LG/RD
S278
See page 97–1
1 C2015
Parking brake switch (15A851)
0) Brake fully released
1) Brake applied
151–6
1 0