C304

14A005

B118
Side air bag sensor,
right (14B345)

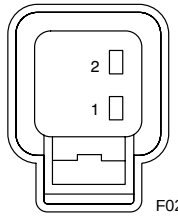

F02337

Pin	Circuit	Circuit Function
1	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return
2	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed

C305

14A005

B119
Side air bag sensor,
left (14B345)

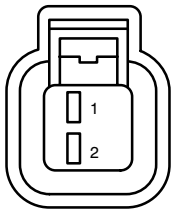

F02069

Pin	Circuit	Circuit Function
1	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
2	1261 (WH/LB)	Air bag – driver side impact – crash sensor to module – feed

C310a

14A006

A208
Restraints control
module (14B321)

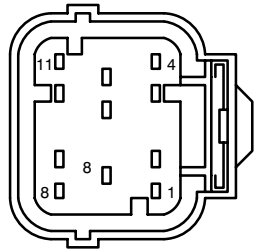

F11018

Pin	Circuit	Circuit Function
1	–	not used
2	1257 (WH/LB)	Air bag – driver side impact – to module – feed
3	1258 (BN/LB)	Air bag – driver side impact – to module – return
4	–	not used
5	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
6	1260 (BN/YE)	Air bag – passenger side impact – to module – return
7	–	not used
8	1261 (WH/LG)	Air bag _ driver side impact – crash sensor to module – feed
9	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
10	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed
11	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return