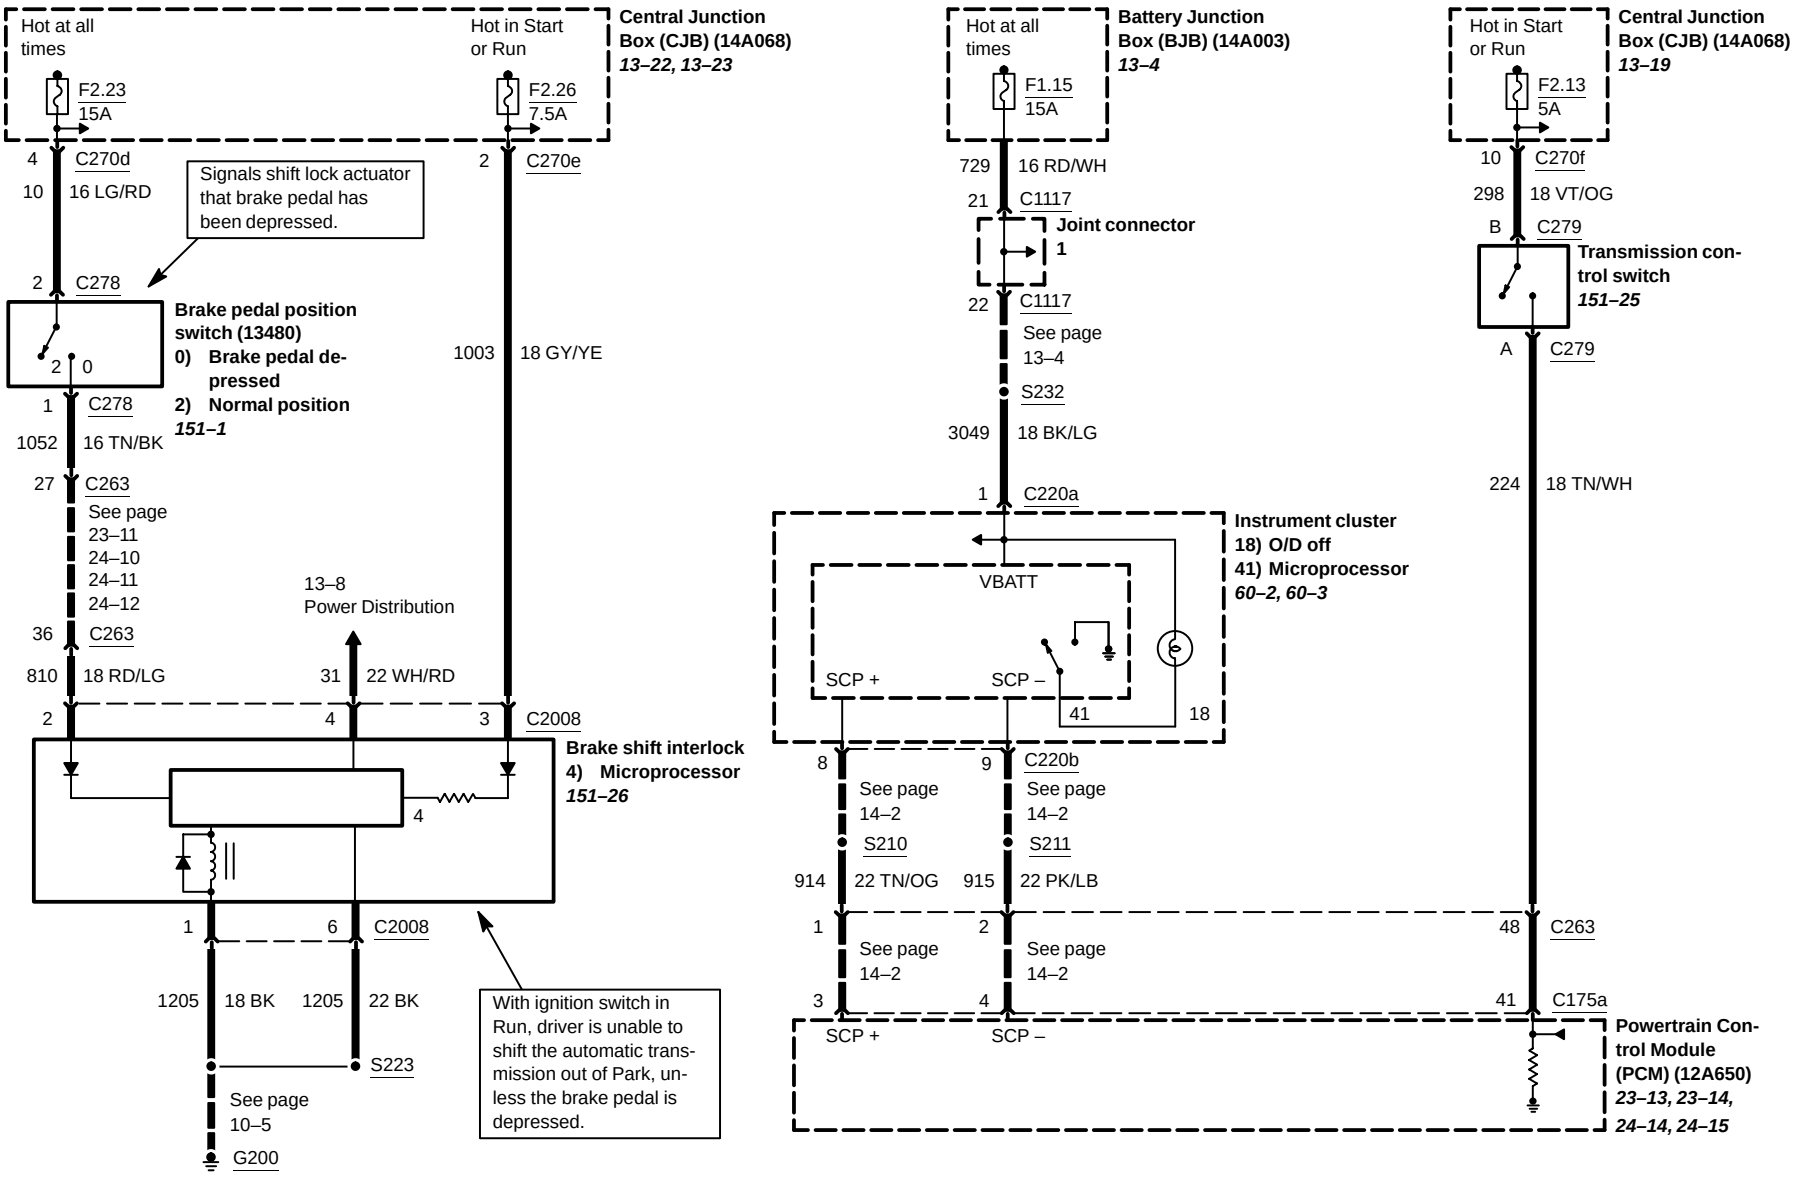
Hot at all times
Hot in Start or Run
Central Junction Box (CJB) (14A068)
13–22, 13–23
F2.23
15A
F2.26
7.5A
4
C270d
10
16 LG/RD
2
C270e
Signals shift lock actuator that brake pedal has been depressed.
2
C278
Brake pedal position switch (13480)
0) Brake pedal depressed
2) Normal position
151–1
1003
18 GY/YE
1
C278
1052
16 TN/BK
27
C263
See page 23–11 24–10 24–11 24–12
13–8
Power Distribution
36
C263
810
18 RD/LG
31
22 WH/RD
2
4
3
C2008
Brake shift interlock
4) Microprocessor
151–26
1
6
C2008
1205
18 BK
1205
22 BK
S223
See page 10–5
G200
With ignition switch in Run, driver is unable to shift the automatic transmission out of Park, unless the brake pedal is depressed.
Hot at all times
Battery Junction Box (BJB) (14A003)
13–4
F1.15
15A
729
16 RD/WH
21
C1117
Joint connector 1
22
C1117
See page 13–4
S232
3049
18 BK/LG
1
C220a
Instrument cluster
18) O/D off
41) Microprocessor
60–2, 60–3
VBATT
SCP +
SCP –
41
18
8
9
C220b
See page 14–2
See page 14–2
S210
S211
914
22 TN/OG
915
22 PK/LB
1
2
See page 14–2
See page 14–2
3
4
SCP +
SCP –
Hot in Start or Run
Central Junction Box (CJB) (14A068)
13–19
F2.13
5A
10
C270f
298
18 VT/OG
B
C279
Transmission control switch
151–25
A
C279
224
18 TN/WH
48
C263
41
C175a
Powertrain Control Module (PCM) (12A650)
23–13, 23–14, 24–14, 24–15