C624

14A005

N341
Power window switch, RH side front

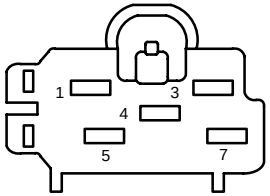

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	313 (WH/YE)	Window switch, feed, right front, Up
3	334 (RD/YE)	Window motor, feed, Up
4	193 (YE/LG)	Window safety relay, switched output
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	333 (YE/RD)	Window motor, feed, Up
7	314 (TN/LB)	Window switch, feed, right front, Up

C701

14A005

N111
Window adjust switch, left rear (14A412)

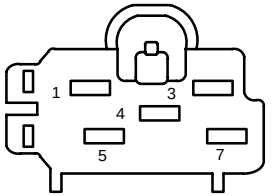

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	317 (GY/OG)	Window switch, feed, left rear, Down
3	885 (YE/LB)	Window switch, to, Window motor, left rear
4	193 (YE/LG)	Window safety relay, switched output
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	884 (YE/BK)	Window switch, to, Window motor, left rear
7	316 (YE/LB0	Window switch, feed, left rear, Up

C703

14A005

M116
Power window motor, left rear (23394)

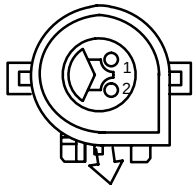

F02489

Pin	Circuit	Circuit function
1	884 (YE/BK)	Window switch, to, Window motor, left rear
2	885 (YE/LB)	Window switch, to, Window motor, left rear