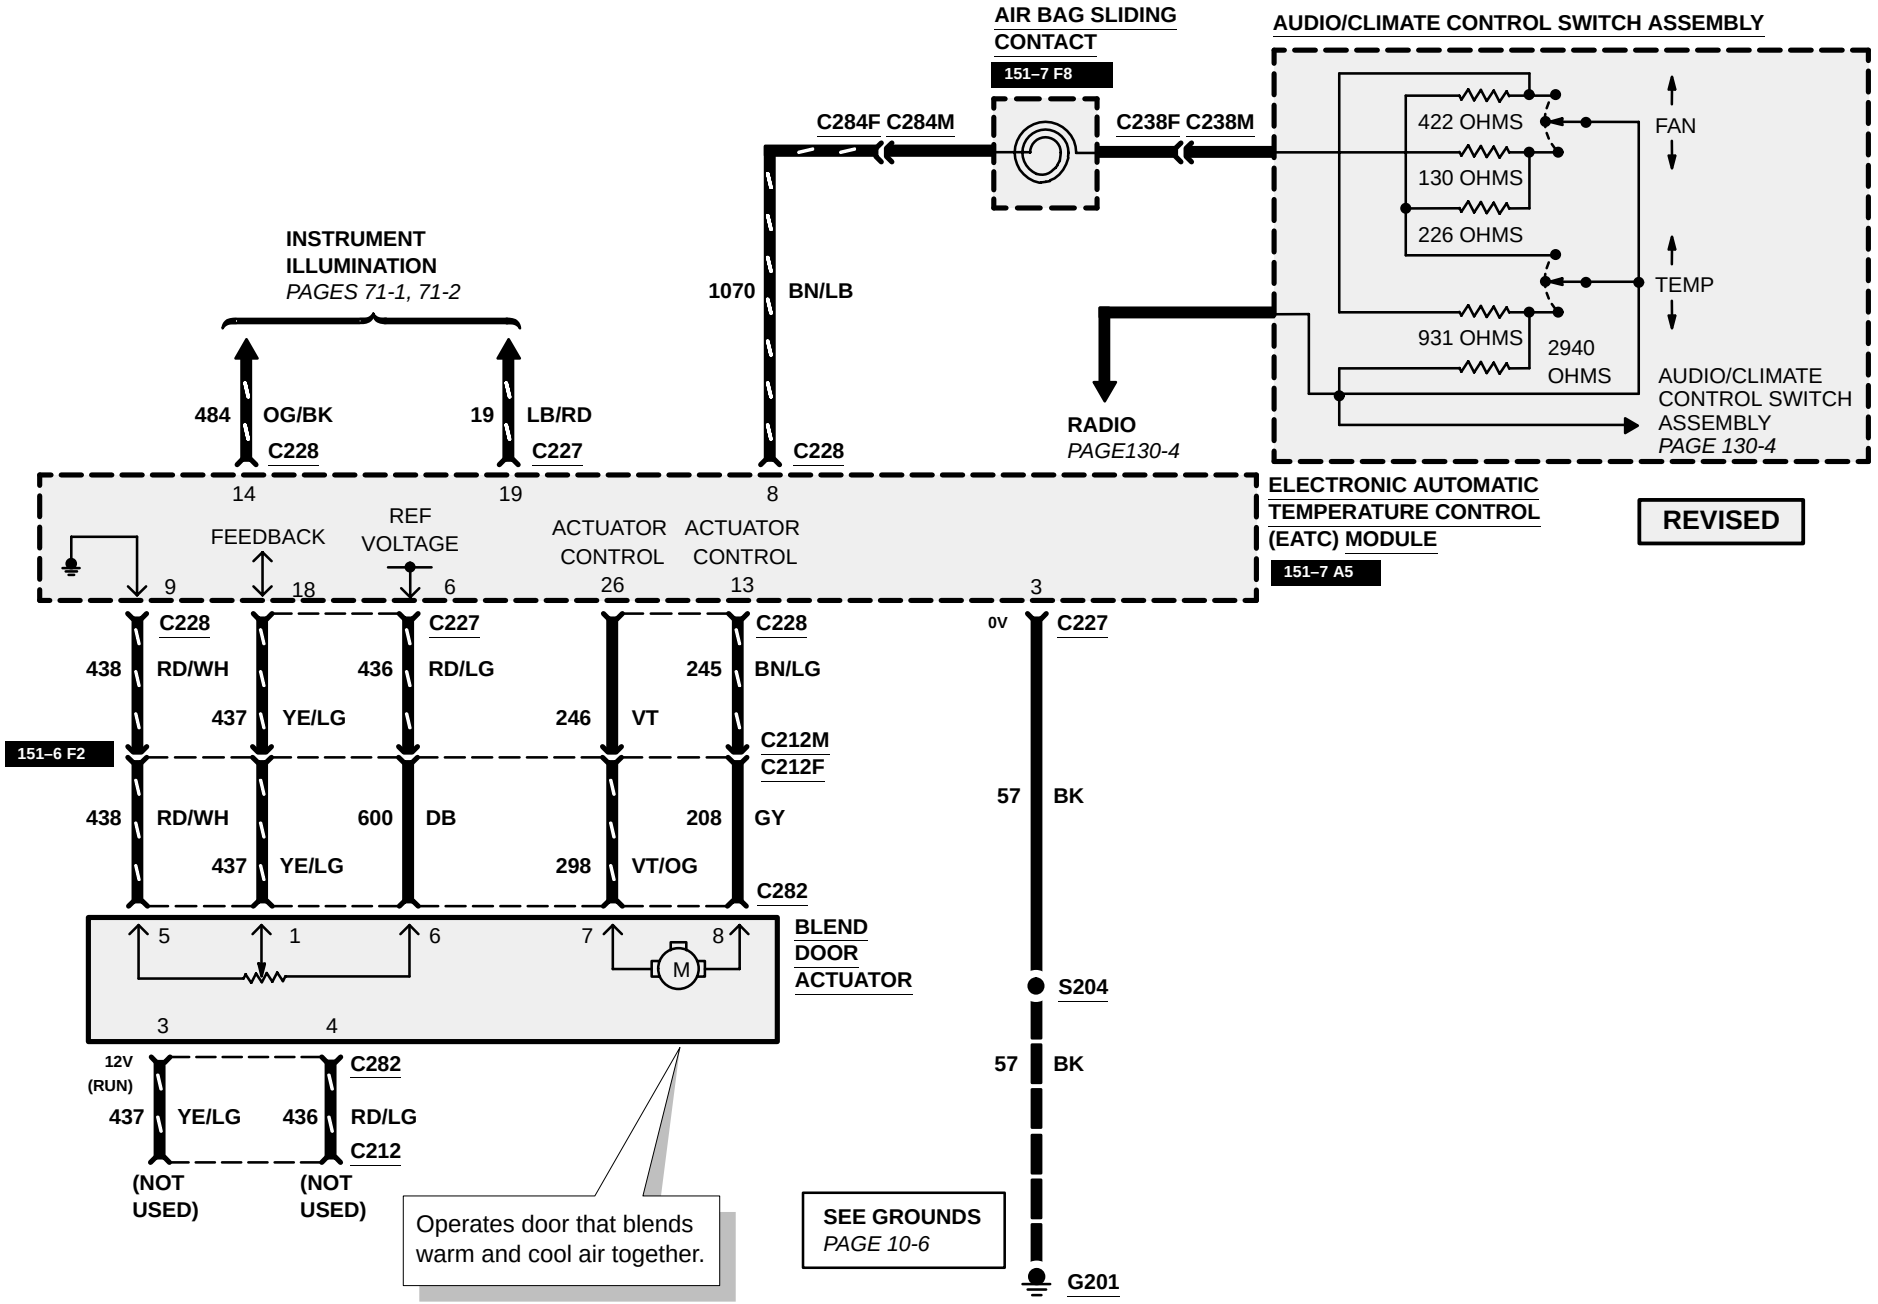
AIR BAG SLIDING CONTACT
151–7 F8
AUDIO/CLIMATE CONTROL SWITCH ASSEMBLY
C284F C284M
C238F C238M
422 OHMS
130 OHMS
226 OHMS
931 OHMS
2940 OHMS
FAN
TEMP
AUDIO/CLIMATE CONTROL SWITCH ASSEMBLY
PAGE 130-4
INSTRUMENT ILLUMINATION
PAGES 71-1, 71-2
1070 BN/LB
484 OG/BK
C228
19 LB/RD
C227
C228
RADIO
PAGE130-4
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC) MODULE
151–7 A5
REVISED
14
19
8
FEEDBACK
REF VOLTAGE
ACTUATOR CONTROL
ACTUATOR CONTROL
9
18
6
26
13
3
C228
C227
C228
0V
C227
438 RD/WH
436 RD/LG
245 BN/LG
437 YE/LG
246 VT
151–6 F2
C212M
C212F
438 RD/WH
600 DB
208 GY
57 BK
437 YE/LG
298 VT/OG
C282
5
1
6
7
8
M
BLEND DOOR ACTUATOR
3
4
S204
12V (RUN)
C282
57 BK
437 YE/LG
436 RD/LG
C212
(NOT USED)
(NOT USED)
Operates door that blends warm and cool air together.
SEE GROUNDS
PAGE 10-6
G201