C3070b (BK)

14A005

Rear Electronic Module (REM)

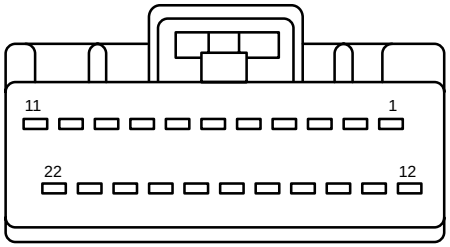

F22009

Pin	Circuit	Circuit function
1	914 (TN/OG)	SCP Bus +
2	915 (PK/LB)	SCP Bus –
3	1348 (GY/OG)	Reference voltage
4	140 (BK/PK)	Electrochromatic inside mirror unit (17700), control
5	267 (BN/LG)	Memory seat switch, position 1
6	268 (BK/OG)	Memory seat switch, position 2
7	–	not used
8	1431 (PK/BK)	Rear Electronic Module (REM), to, Module, power sliding door, RH side, and, Module, power sliding door, LH side
9	1434 (LB/PK)	wake up, signal, to, Module, power sliding door, RH side, and, Module, power sliding door, LH side
10	1429 (GY/YE)	Rear Electronic Module (REM), to, Module, power sliding door, LH side, Remote
11	1430 (TN/RD)	Rear Electronic Module (REM), to, Module, power sliding door, RH side, Remote control unit
12	1205 (BK)	Ground
13	810 (RD/LG)	Brake pedal position switch (13480), input
14	1351 (TN)	Liftgate ajar switch, input
15	1350 (WH/PK)	Liftgate, disarm, switch, input
16	465 (WH/LB)	temperature request, auxiliary blend door, input
17	1349 (PK/LG)	blower speed request, input
18	–	not used
19	–	not used
20	1126 (LB)	Signal return, auxiliary blend door, auxiliary mode door
21	–	not used
22	1360 (BN/PK)	Interior Lighting, control