## C488

### 13412

Reversing lamp, right (13411)

Early production




F03033

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 140 (BK/PK) | Voltage supplied in reverse |

Late production

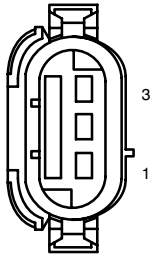


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 140 (BK/PK) | Voltage supplied in reverse |

## C500

### 14A005

Key pad switch assembly

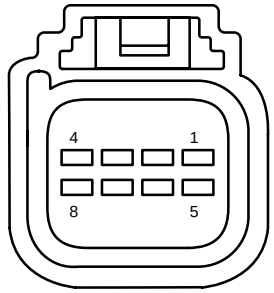


F08203

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 78 (LB/YE) | Key pad, output A |
| 2 | 797 (LG/VT) | Voltage supplied at all times (overload protected) |
| 3 | 79 (LG/RD) | Key pad, output B |
| 4 | – | not used |
| 5 | 66 (LB) | Key pad illumination |
| 6 | 57 (BK) | Ground |
| 7 | 121 (YE/BK) | Key pad, output C |
| 8 | – | not used |