Power Window Switch, Passenger Door

Schematic

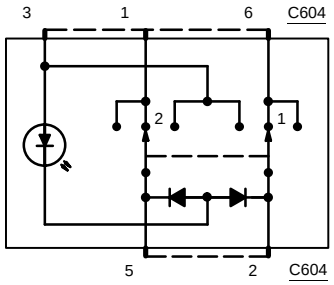

N111
Window adjust switch, passenger side
1) Up
2) Down

Terminals

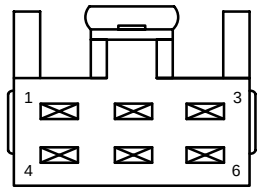

F06211

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Window adjust switches	3 and 2	Up	Closed circuit
	3 and 5	Down	Closed circuit
	1 and 5 6 and 2	Rest	Closed circuit