C451b (BU)

14014

A77
Anti–theft/central locking module

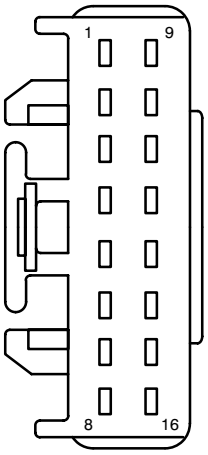

F16029

Pin	Circuit	Circuit Function
1	31S-GL27 (BK/OG)	Ground, switched
2	31S-GL20 (BK/RD)	Ground, switched
3	31S-GL7 (BK/YE)	Ground, switched
4	8-AA6 (WH)	Sensor signal
5	31S-GL6 (BK/OG)	Ground, switched
6	31S-GL24 (BK/YE)	Ground, switched
7	–	not used
8	49-GL26 (BU/YE)	Pulsed power feed (overload protected)
9	31S-GL47 (BK/BU)	Ground, switched
10	31S-GL15 (BK/OG)	Ground, switched
11	31S-AA61 (BK/BU)	Ground, switched
	31S-AA61A (BK/BU)	Ground, switched
12	31S-GL46 (BK/YE)	Ground, switched
13	–	not used
14	–	not used
15	31S-AA62 (BK/WH) + 31S-AA62A (BK/WH)	Ground, switched
16	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open

C456

14K024

N278
Ignition switch

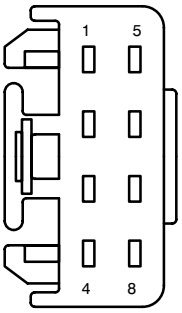

F08074

Pin	Circuit	Circuit Function
1	30-BB9 (RD)	Voltage supplied at all times (not overload protected)
2	–	not used
3	30S-TA31 (RD/BK)	Voltage supplied at all times (not overload protected), switched
4	15-DA1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
5	50-BB11 (GY/WH)	Voltage, ignition switch in Start (not overload protected)
6	–	not used
7	–	not used
8	75-GG14 (YE/BU) + 75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run