C3034

14C719

Climate controlled seat
backrest element, driver side

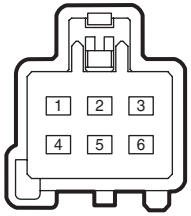

97BG-14A459-YFB (M)

Pin	Circuit	Circuit Function
1	—	not used
2	1062 (RD/LB)	Heated driver seat-back sensor, feed
3	1549 (DB/OG)	Climate control seat - back temperature sensor signal
4	1067 (VT/LB)	Heated driver seat-back heater element return
5	—	not used
6	1066 (GY/LB)	Heated driver seat-back heater element feed

C3035

14C719

Climate controled seat
cushion element, driver side

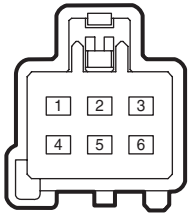

97BG-14A459-YFB (M)

Pin	Circuit	Circuit Function
1	—	not used
2	1060 (BK/LB)	Heated driver seat- seat sensor, feed
3	1548 (DG/LG)	Climate control seat - cushion temperature sensor signal
4	1065 (WH/LB)	Heated driver seat-seat heater element return
5	—	not used
6	1064 (YE/LB)	Heated driver seat-seat heater element feed

C3036a

14C719

Climate controlled seat module,
passenger side

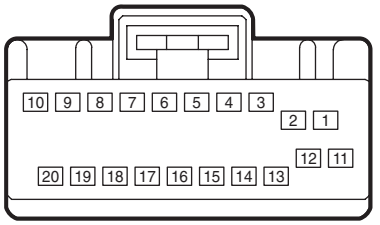

XW4T-14A464-AZA (F)

Pin	Circuit	Circuit Function
1	1064 (YE/LB)	Heated driver seat-seat heater element feed
2	1065 (WH/LB)	Heated driver seat-seat heater element return
3	1553 (BK)	Climate control seat - fan control voltage return
4	1255 (WH/RD)	Heated seat control switch to module-driver seat enable
5	1256 (WH/YE)	Heated seat control switch to module- passenger seat enable
6	1551 (VT/WH)	Climate control seat - hot/ cool signal
7	579 (BK/OG)	Heated seat control switch-passenger temperature adjust (+)
8	—	not used
9	1203 (BK/LB)	Electronic module logic ground (type 2 ground)
10	1565 (VT)	Climate control seat - seat fan 12 volt logic
11	1066 (GY/LB)	Heated driver seat-back heater element feed
12	1067 (VT/LB)	Heated driver seat-back heater element return
13	1552 (RD)	Climate control seat - fan control voltage feed
14	1554 (WH)	Climate control seat - ttl (transistor- transistor logic) fan tach.
15	1550 (WH/OG)	Climate control seat - control switch signal
16	1551 (VT/WH)	Climate control seat - hot/ cool signal
17	1060 (BK/LB)	Heated driver seat- seat sensor, feed
18	1548 (DG/LG)	Climate control seat - cushion temperature sensor signal
19	1549 (DB/OG)	Climate control seat - back temperature sensor signal
20	1062 (RD/LB)	Heated driver seat-back sensor, feed