C819 (GN)

14014

Window adjust switch, right rear (14A412)

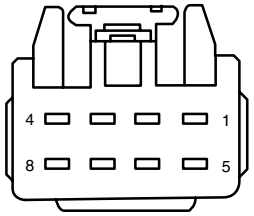

F08295

Pin	Circuit	Circuit function
1	57 (BK)	Ground, Illumination
2	319 (YE/BK)	Window switch, feed, right rear, Down
3	881 (BN)	Window motor, feed, Down
4	193 (YE/LG)	Window lockout, control
5	19 (LB/RD)	Illumination, Power
6	–	not used
7	882 (BN/YE)	Window motor, feed, Up
8	320 (RD/BK)	Window switch, feed, right rear, Up

C820 (BK)

14014

Door ajar switch, passenger side rear (14018)

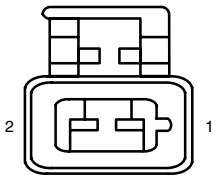

F02379

Pin	Circuit	Circuit function
1	346 (BK/WH)	Door ajar switch, passenger side rear (14018), signal
2	57 (BK)	Ground

C903 (WH)

14335

Map reading lamp, right front (13466)

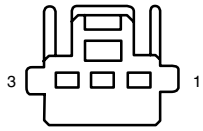

F03299

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output
3	705 (LG/OG)	Battery saver relay, output

C906 (BK)

14335

Vanity mirror lamp, right (04100)

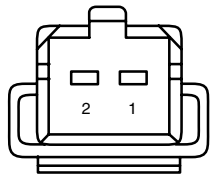

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, output
2	57 (BK)	Ground

C907 (BK)

14335

Vanity mirror lamp, left (04100)

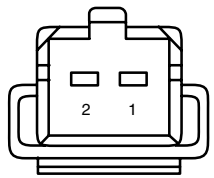

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, output
2	57 (BK)	Ground