C820

Late production

Early production (GY)

14632

Door ajar switch, right rear



F02221

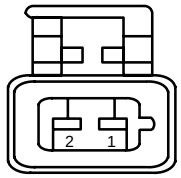

F02379

Pin	Circuit	Circuit function
1	760 (PK/LB)	Door ajar switch, right rear
2	57 (BK)	Ground

C907

(BK)

14335

Vanity mirror lamp, left (04100)

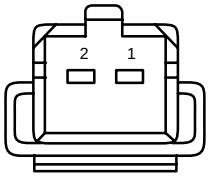

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C901

(WH)

14334

Map reading lamps

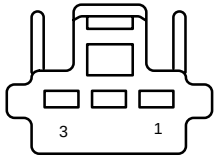

F03173

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power

C906

(BK)

14335

Vanity mirror lamp, right (04100)

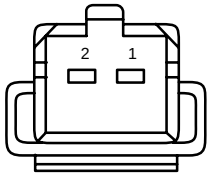

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C911

(BK)

14335

Electrochromatic in-side mirror unit (17700)



F07075

Pin	Circuit	Circuit function
1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
2	57 (BK)	Ground
3	140 (BK/PK)	Voltage supplied in reverse
4	–	not used
5	–	not used
6	–	not used
7	–	not used