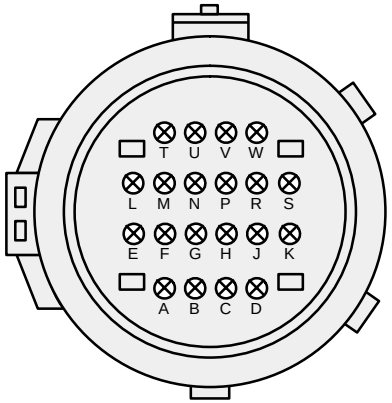

C319

ALLISON 2000/2400 TRANSMISSION

PIN	CIRCUIT	CIRCUIT FUNCTION
A	226 (WH/BK)	To Allison 2000/2400 Control Unit
B	227 (YE)	To Allison 2000/2400 Control Unit
C	231 (BK/YE)	To Allison 2000/2400 Control Unit
D	201 (TN/RD)	To Allison 2000/2400 Control Unit
E	203 (OG/LB)	To Allison 2000/2400 Control Unit
F	202 (OG/LG)	To Allison 2000/2400 Control Unit
G	210 (LB)	To Allison 2000/2400 Control Unit
H	220 (VT/OG)	To Allison 2000/2400 Control Unit
J	229 (RD/OG)	To Allison 2000/2400 Control Unit
K	234 (DB/WH)	To Allison 2000/2400 Control Unit
L	222 (BN/LG)	To Allison 2000/2400 Control Unit
M	223 (TN/LG)	To Allison 2000/2400 Control Unit
N	224 (TN/WH)	To Allison 2000/2400 Control Unit
P	225 (BN/LG)	To Allison 2000/2400 Control Unit
R	48	Terminates in Harness
S	232 (LG/YE)	To Allison 2000/2400 Control Unit
T	221 (OG/WH)	To Allison 2000/2400 Control Unit
U	48	Terminates in Harness
V	48	Terminates in Harness
W	228 (DB)	To Allison 2000/2400 Control Unit

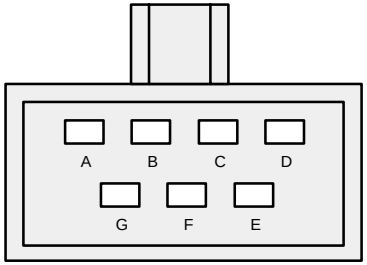

C341

NSBU SWITCH #1

PIN	CIRCUIT	CIRCUIT FUNCTION
A	48	Terminates in Harness
B	48	Terminates in Harness
C	295 (LB/PK)	Reversing Lamps
D	220 (VT/OG)	Allison 2000/2400 Transmission
E	325 (DB/OG)	Starting System
F	140 (BK/PK)	Reversing Lamps
G	32 (RD/LB)	Starting System

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C202	59-6
C213	60-7
C410	42-7