C610

14A488

XW4T-14A624-BHB (M)

14A584

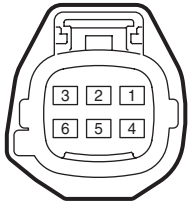

XW4T-14A464-BEB (F)

(1) 118 (PK/OG)
(2) 761 (GY/RD)
(3) -not used-
(4) 117 (PK/BK)
(5) -not used-
(6) 1205 (BK)

C611

14A699

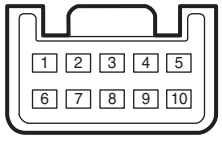

98BG-14A459-EKB (M)

14A488

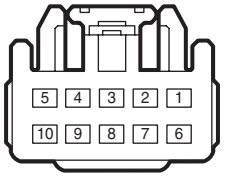

98AG-14489-EKB (F)

(1) 979 (RD/LB)
(2) 978 (YE/LB)
(3) 1205 (BK)
(4) 1094 (PK)
(5) 1097 (BN)
(6) 1462 (RD/WH)
(7) 988 (YE/LG)
(8) 982 (YE/LG)
(9) 981 (RD/WH)
(10) 980 (YE/WH)

C612

14A488

Speaker, right front

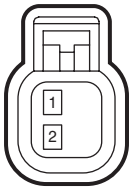

XR3T-14A464-BA (F)

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker voice coil feed-front (right channel)
2	811 (DG/OG)	Speaker switch ground to right front speaker

C622

14A488

Exterior rear view mirror, right

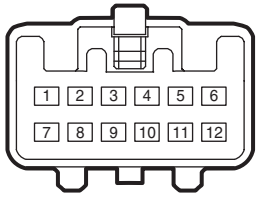

97BG-14A459-YMB (M)

Pin	Circuit	Circuit Function
1	1482 (PK)	RH memory mirror left/right motor - up
2	1483 (WH/PK)	RH memory mirror left/right motor - down
3	1480 (WH/LG)	RH memory mirror left/right motor - left
4	1481 (DG)	RH memory mirror left/right motor - right
5	957 (VT/WH)	RH mirror up/down position sensor
6	891 (RD/BK)	Memory mirror module position +
7	954 (DG/WH)	RH mirror left/right position sensor
8	894 (GY)	Memory mirror module position -
9	59 (DG/VT)	Heated exterior mirror feed
10	2 (WH/LB)	RH front turn signal lamp
11	55 (BK/PK)	Cargo lamp switch to cargo lamp
12	1205 (BK)	General ground (type 4 ground)