C912b

14334

N411
Roof opening panel switch (15B691)

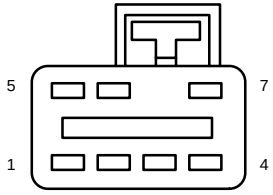

F07085

Pin	Circuit	Circuit function
1	1175 (TN/RD)	Roof opening panel switch (15B691), closed, signal
2	1205 (BK)	Ground
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	1174 (WH/RD)	Roof opening panel switch (15B691), Open, signal

C920

15C670

M201
Roof opening panel motor assembly (15790)

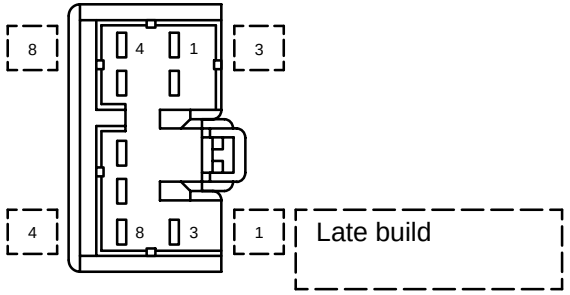

F08089

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	1205 (BK)	Ground
	400 (LB/BK)	Accessory relay, switched power, output
5	1173 (BN/OG)	Voltage supplied at all times (overload protected)
	1175 (TN/RD)	Roof opening panel motor assembly (15790), closed, signal
6	1174 (WH/RD)	Roof opening panel switch (15B691), Open, signal
7	1175 (TN/RD)	Roof opening panel switch (15B691), closed, signal
	1173 (BN/OG)	Voltage supplied at all times (overload protected)
8	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
	1205 (BK)	Ground