C3066 (BK)

14A005

Safety belt buckle switch, passenger



F02383

Pin	Circuit	Circuit function
1	1514 (RD/BK)	Safety belt buckle switch, passenger, signal
2	570 (BK/WH)	Ground

C3164 (BK)

14A005

Power point, left rear

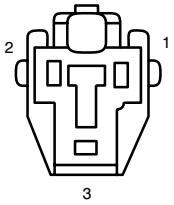

F03163

Pin	Circuit	Circuit function
1	687 (GY/YE)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C3209 (BK)

14A005

Side impact sensor, driver 1



F02383

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
2	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed

C3210 (BK)

14A005

Side impact sensor, driver 2



F02383

Pin	Circuit	Circuit function
1	1642 (DG/WH)	driver side impact Sensor, return 2
2	1641 (VT)	driver side impact Sensor, feed 2

C3211 (BK)

14A005

Side impact sensor, passenger 1



F02383

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return
2	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed

C3212 (BK)

14A005

Side impact sensor, passenger 2



F02383

Pin	Circuit	Circuit function
1	1644 (LB/WH)	passenger side impact Sensor, return 2
2	1643 (WH/RD)	passenger side impact Sensor, feed 2