3.9L

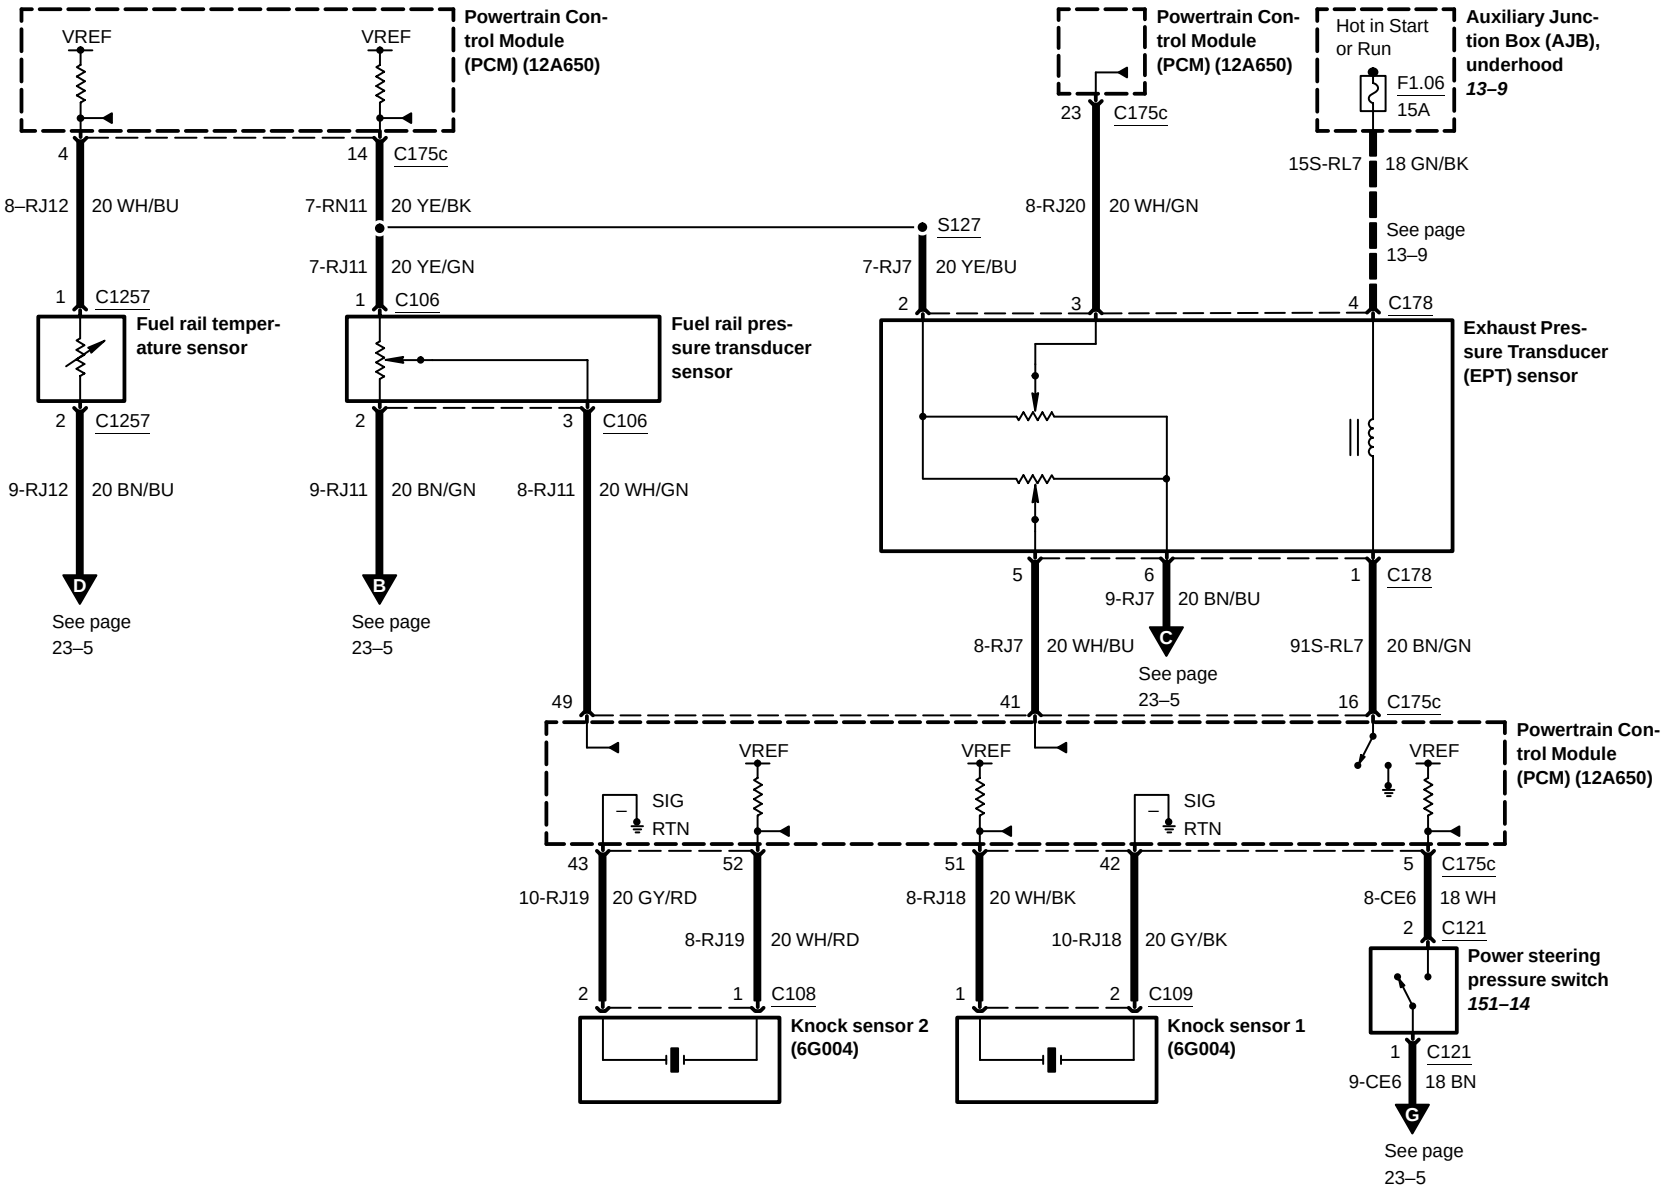
Powertrain Control Module (PCM) (12A650)
VREF
VREF
4
14
C175c
8–RJ12
20 WH/BU
7-RN11
20 YE/BK
1
C1257
Fuel rail temperature sensor
2
C1257
9-RJ12
20 BN/BU
D
See page 23–5
7-RJ11
20 YE/GN
1
C106
Fuel rail pressure transducer sensor
2
3
C106
9-RJ11
20 BN/GN
8-RJ11
20 WH/GN
B
See page 23–5
S127
7-RJ7
20 YE/BU
Powertrain Control Module (PCM) (12A650)
23
C175c
8-RJ20
20 WH/GN
Hot in Start or Run
F1.06
15A
Auxiliary Junction Box (AJB), underhood 13–9
15S-RL7
18 GN/BK
See page 13–9
2
3
4
C178
Exhaust Pressure Transducer (EPT) sensor
5
6
1
C178
9-RJ7
20 BN/BU
8-RJ7
20 WH/BU
C
See page 23–5
91S-RL7
20 BN/GN
49
41
16
C175c
Powertrain Control Module (PCM) (12A650)
VREF
VREF
VREF
SIG RTN
SIG RTN
43
52
51
42
5
C175c
10-RJ19
20 GY/RD
8-RJ19
20 WH/RD
8-RJ18
20 WH/BK
10-RJ18
20 GY/BK
8-CE6
18 WH
2
C121
Power steering pressure switch 151–14
2
1
C108
Knock sensor 2 (6G004)
1
2
C109
Knock sensor 1 (6G004)
1
C121
9-CE6
18 BN
G
See page 23–5