C6015

V8 Engine Harness

IDM connector

3575888C1

Pin	Circuit	Circuit Function
1	464 (BK/PK)	Wait to start signal
2	511 (LG)	Brake normally open
3	569 (DG)	Brake normally open
4	31 (WH/RD)	Engine oil pressure
5	676 (PK/OG)	Engine coolant temperature
6	39 (RD/WH)	Engine coolant temperature
7	658 (PK/LG)	Engine warning light
8	—	Not used

C6020

V8 Engine Harness

ECM2 connector

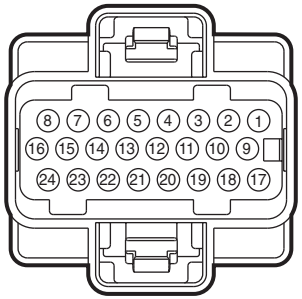

3562311C1

Pin	Circuit	Circuit Function
1	—	Not used
2	—	Not used
3	16 (RD/LG)	Ignition run/start to ECM
4	—	Not used
5	2 (WH/RD)	Relay coil to ECM
6	570 (BK/WH)	ECM ground (type 1 ground)
7	570 (BK/WH)	ECM ground (type 1 ground)
8	32 (RD/LB)	Starter control
9	—	Not used
10	361 (RD)	Module, powertrain control - VPWR feed
11	648 (WH/PK)	Tachometer to rpm sensor, feed
12	1827 (YE)	CAN + data link
13	1828 (GN)	CAN - data link
14	848 (DG/OG)	Speed control switch to ECM
15	—	Not used
16	—	Not used
17	—	Not used
18	—	Not used
19	—	Not used
20	—	Not used
21	154 (VT/LG)	Speed control switch to ECM
22	—	Not used
23	329 (PK)	Crank enable relay
24	356 (DB/LG)	Barometric pressure sensor, feed