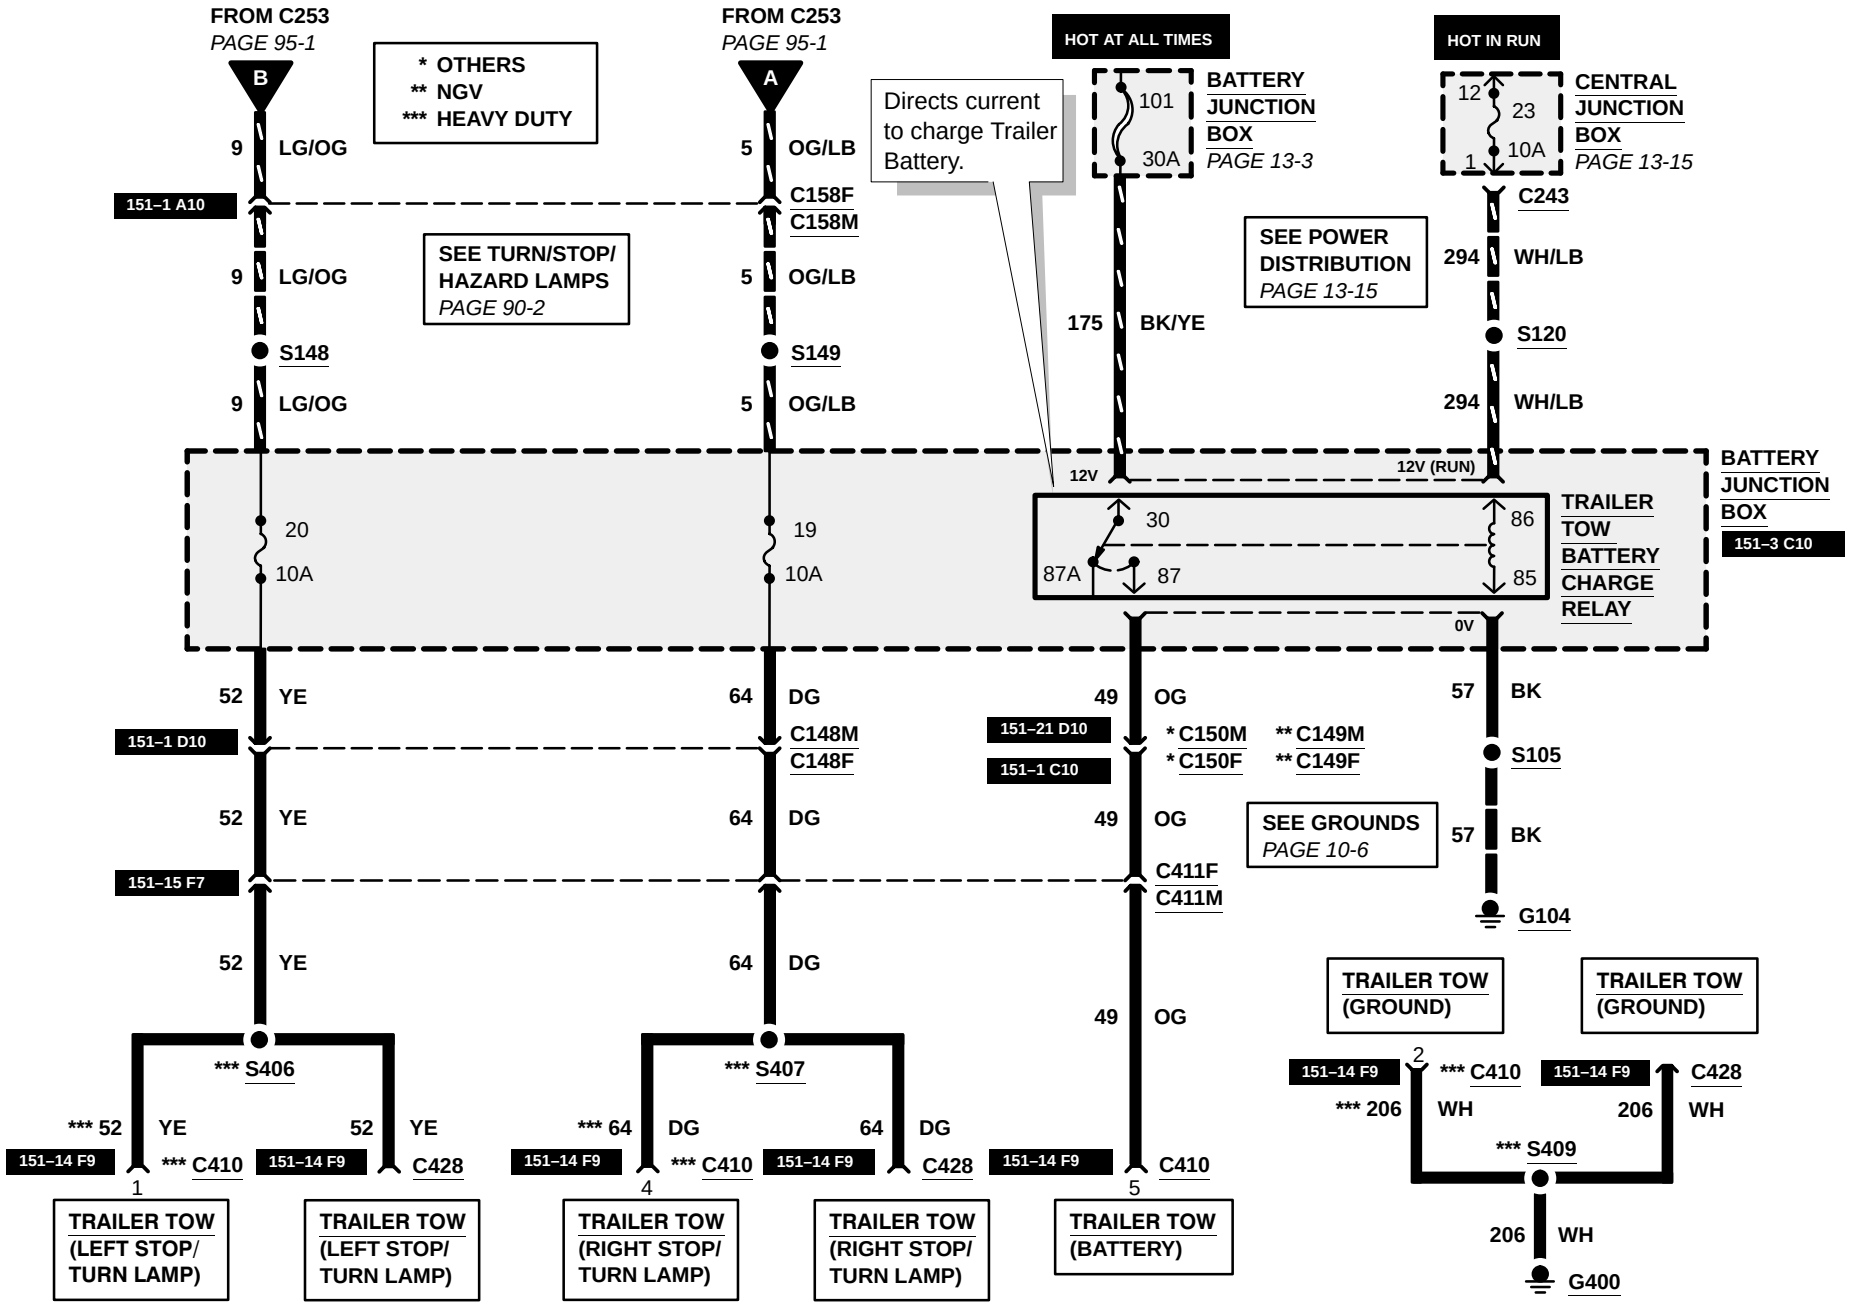
FROM C253
PAGE 95-1
B
* OTHERS
** NGV
*** HEAVY DUTY
FROM C253
PAGE 95-1
A
HOT AT ALL TIMES
HOT IN RUN
Directs current to charge Trailer Battery.
BATTERY JUNCTION BOX
PAGE 13-3
CENTRAL JUNCTION BOX
PAGE 13-15
9 LG/OG
5 OG/LB
151–1 A10
C158F
C158M
C243
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-2
SEE POWER DISTRIBUTION
PAGE 13-15
294 WH/LB
175 BK/YE
S120
S148
S149
12V
12V (RUN)
BATTERY JUNCTION BOX
151–3 C10
20
10A
19
10A
30
86
87A
87
85
TRAILER TOW BATTERY CHARGE RELAY
0V
52 YE
64 DG
49 OG
57 BK
151–1 D10
C148M
C148F
151–21 D10
151–1 C10
* C150M
* C150F
** C149M
** C149F
S105
SEE GROUNDS
PAGE 10-6
151–15 F7
C411F
C411M
G104
*** S406
*** S407
TRAILER TOW (GROUND)
TRAILER TOW (GROUND)
151–14 F9
*** C410
C428
*** 206 WH
206 WH
*** S409
206 WH
G400
TRAILER TOW (LEFT STOP/ TURN LAMP)
TRAILER TOW (LEFT STOP/ TURN LAMP)
TRAILER TOW (RIGHT STOP/ TURN LAMP)
TRAILER TOW (RIGHT STOP/ TURN LAMP)
TRAILER TOW (BATTERY)