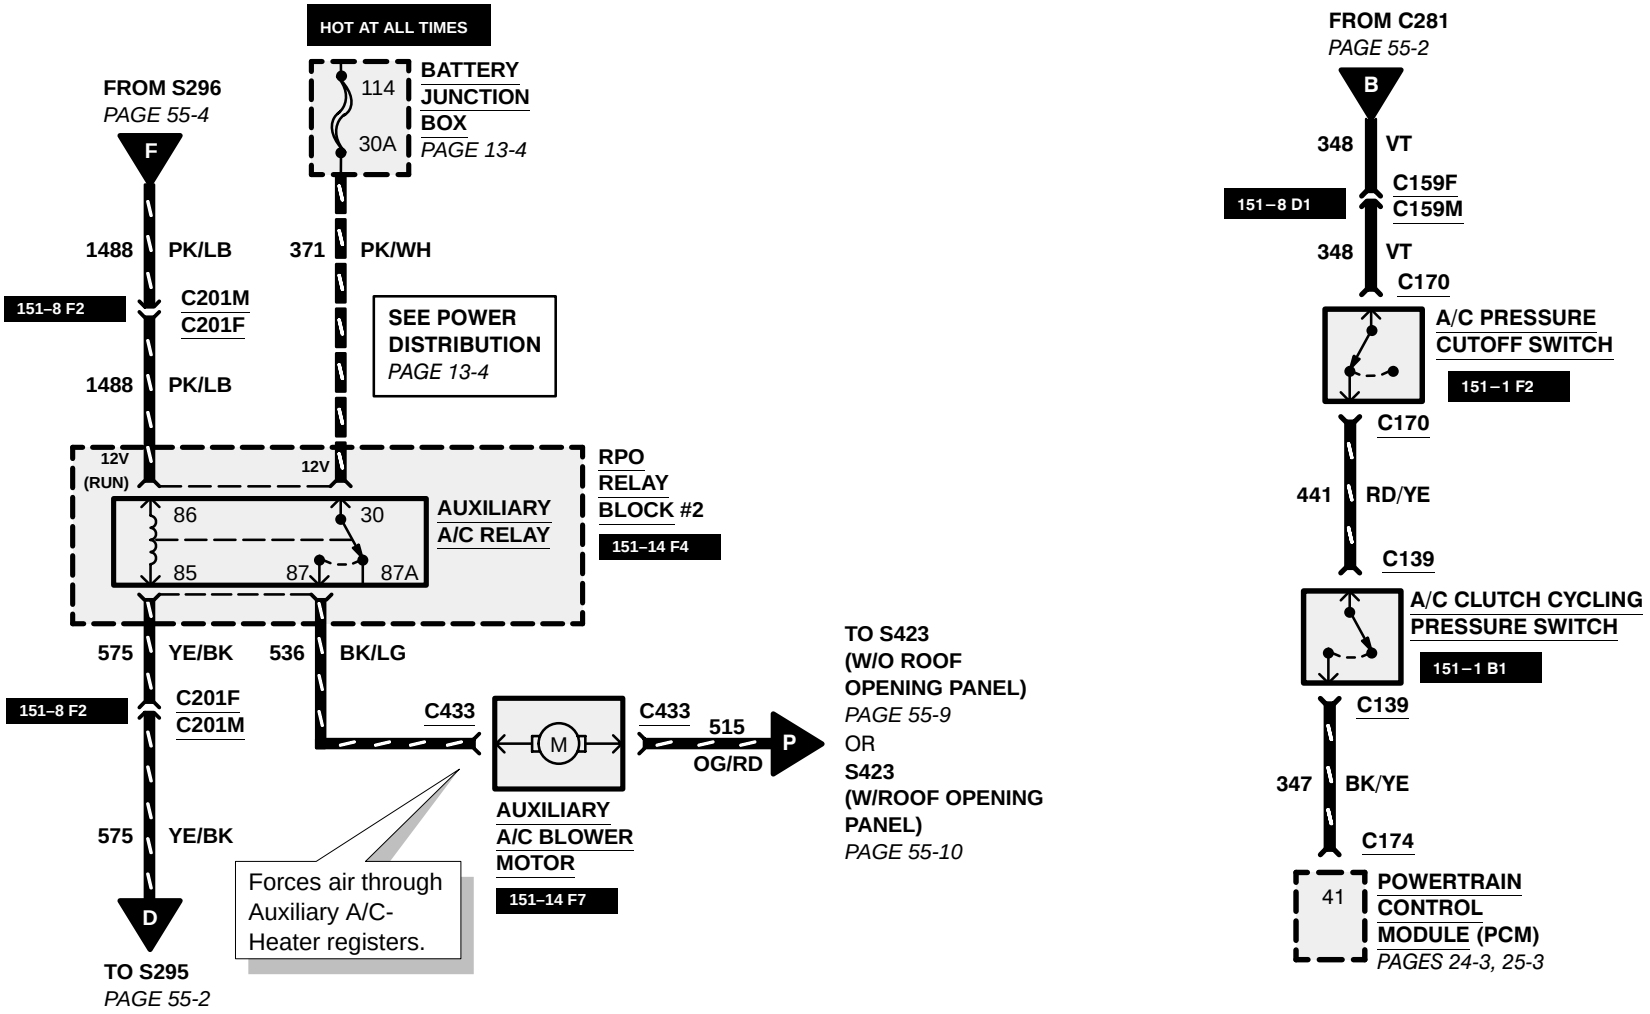
HOT AT ALL TIMES
FROM S296
PAGE 55-4
F
BATTERY JUNCTION BOX
PAGE 13-4
114
30A
1488 PK/LB
371 PK/WH
151–8 F2
C201M
C201F
SEE POWER DISTRIBUTION
PAGE 13-4
1488 PK/LB
12V (RUN)
12V
RPO RELAY BLOCK #2
151–14 F4
86
30
85
87
87A
AUXILIARY A/C RELAY
575 YE/BK
536 BK/LG
151–8 F2
C201F
C201M
C433
C433
515 OG/RD
P
TO S423
(W/O ROOF OPENING PANEL)
PAGE 55-9
OR
S423
(W/ROOF OPENING PANEL)
PAGE 55-10
M
AUXILIARY A/C BLOWER MOTOR
151–14 F7
575 YE/BK
Forces air through Auxiliary A/C-Heater registers.
D
TO S295
PAGE 55-2
FROM C281
PAGE 55-2
B
348 VT
151–8 D1
C159F
C159M
348 VT
C170
A/C PRESSURE CUTOFF SWITCH
151–1 F2
C170
441 RD/YE
C139
A/C CLUTCH CYCLING PRESSURE SWITCH
151–1 B1
C139
347 BK/YE
C174
41
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-3, 25-3