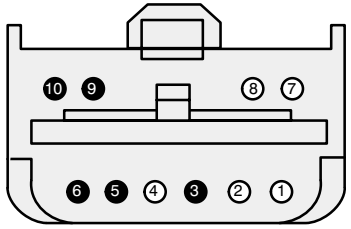

C330

MEMORY LOCK MODULE/LOCK JUMPER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	118 (PK/OG)	Door Lock Actuator (UNLOCK) Input
2	117 (PK/BK)	Door Lock Actuator (LOCK) Input
3	–	NOT USED
4	57 (BK)	Ground
5	–	NOT USED
6	–	NOT USED
7	121 (YE/BK)	Side Door (LOCK) Output
8	517 (BK/WH)	Power (Hot at All Times)
9	–	NOT USED
10	–	NOT USED

REVISED

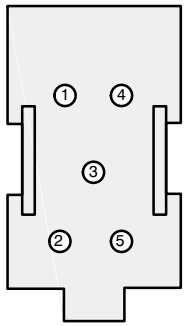

C425

REAR POWER DOOR LOCK SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	124 (BN)	Doors Unlock Feed
2	120 (PK/LG)	Doors Unlock Feed
3	517 (BK/WH)	Power (Hot at All Times)
4	119 (PK/YE)	Doors Lock Feed
5	123 (RD)	Doors Lock Feed

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C500	100-3
C600	100-3