-102

C957

14K733

Y16
A/C Compressor clutch

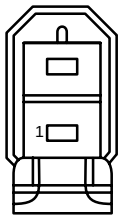

F02271

Pin	Circuit	Circuit Function
1	15S-FA6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	31-FA6 (BK)	Ground

C961

14K733

A149
Inlet Manifold Runner Control (IMRC) module

F06017



Pin	Circuit	Circuit Function
1	91S-RS3 (BK/WH)	Ground, switched
2	15-RS3 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	91-RS3 (BK/WH)	Ground
4	–	not used
5	8-RJ16 (WH/RD)	Sensor signal
	91-RJ16 (BK/BU)	Ground (clean ground)
6	91-RJ16 (BK/BU)	Ground
	8-RJ16 (WH/RD)	Sensor signal (X–direction, forward, upward)

C960 (GY)

9H589

A149
Inlet Manifold Runner Control (IMRC) module

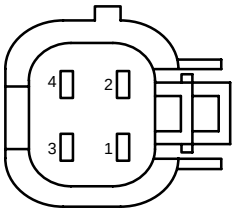

F04144

Pin	Circuit	Circuit Function
1	31S-RS3 (BK/WH)	Ground, switched
2	91-RS3 (BK/WH)	Ground
3	15-RS3 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
4	8-RS3 (WH/VT)	Sensor signal

C962

9H589

SPI

B225
Fuel rail pressure transducer sensor

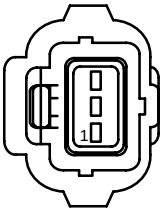

F03093

Pin	Circuit	Circuit Function
1	7-RJ11 (YE/GN)	Voltage D.C. supplied at all times (sensor)
2	9-RJ11 (BN/GN)	Sensor signal return (reference/ground)
3	8-RJ11 (WH/GN)	Sensor signal