C4207b

14A488

Telematics Control Unit (TCU) module

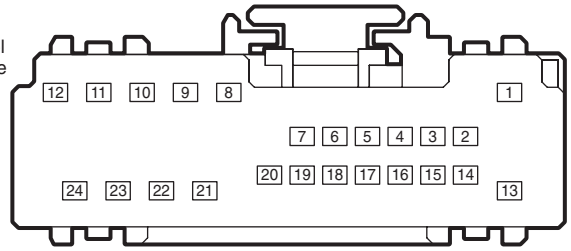

3W4T-14A464-EA (F)

Pin	Circuit	Circuit Function
1	1001 (WH/YE)	Fused battery feed to module, GEM-input
2	1003 (GY/YE)	Fused ignition "run" to module, GEM-input
3	—	not used
4	914 (TN/OG)	J1850 bus plus/data plus
5	915 (PK/LB)	J1850 bus minus/data minus
6	—	not used
7	—	not used
8	—	not used
9	—	not used
10	—	not used
11	693 (OG)	Module diagnostic
12	—	not used
13	—	not used
14	1002 (BK/PK)	Fused ignition "run/accessory" to module, GEM-input
15	—	not used
16	—	not used
17	1886 (GY)	Vems airbag activation input from RCM
18	1535 (BK)	Navigation switch/display unit - video green - coax cable
19	1534 (BK)	Navigation switch/display unit - video red - coax cable
20	—	not used
21	1001 (WH/YE)	Fused battery feed to module, GEM-input
22	—	not used
23	—	not used
24	1205 (BK)	General ground (type 4 ground)

C4207c

14A488

Telematics antenna



3W4T-14489-EA (F)

Pin	Circuit	Circuit Function
1	1292A (BK)	Cellular phone transceiver to antenna (coaxial cable)

C4207d

14A488

Telematics antenna



3W4T-14489-BA (F)

Pin	Circuit	Circuit Function
1	1292 (BN)	Cellular phone transceiver to antenna (coaxial cable)

C4207e

14A488

Telematics antenna



3W4T-14A459-BA (M)

Pin	Circuit	Circuit Function
1	1292 (BN)	Cellular phone transceiver to antenna (coaxial cable)

C4207f

14A488

Telematics antenna



3W4T-14A459-GA (M)

Pin	Circuit	Circuit Function
1	1292A (BK)	Cellular phone transceiver to antenna (coaxial cable)