C2116

14401

Auxiliary A/C relay

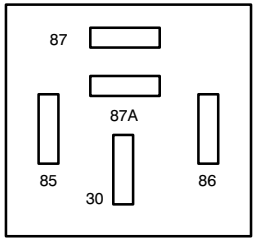

F05129

Pin	Circuit	Circuit function
30	364 (BK/LG)	Voltage supplied at all times (overload protected)
85	57 (BK)	Ground
86	181 (BN/OG)	Voltage in Run (overload protected) – manual A/C
	295 (LB/PK)	Voltage in Run (overload protected) – with EATC
87	371 (PK/WH)	Blower motor, rear, feed
87A	–	not used

C2142 (GY)

14401

Trailer electronic brake control connector

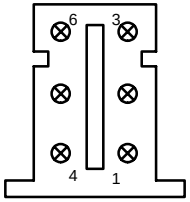

F06138

Pin	Circuit	Circuit function
1	–	not used
2	14 (BN)	Power, Exterior lamps
3	206 (WH)	Trailer tow connector (15A416), Ground
4	50 (RD)	Central Junction Box (CJB) (14A067), Start, to, Ignition switch (11572)
5	511 (LG)	Brake pedal position switch (13480), to stoplamps
6	43 (DB)	Electric trailer brakes

C2135

14401

Overdrive cancel switch (7G550)

F03245

Pin	Circuit	Circuit function
1	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	224 (TN/WH)	Powertrain Control Module (PCM) (12A650), to transmission overdrive cancel switch