C361

14B719

Lumbar adjust switch, left front (14B691)

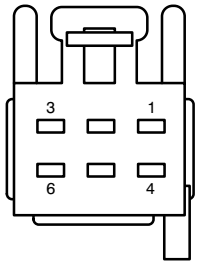

F06167

Pin	Circuit	Circuit function
1	32-AH39 (WH/BU)	Driver seat lumbar compressor motor (65500) +/ -
2	–	not used
3	31-AH40 (BK/GN)	Ground
4	33-AH39 (YE/BU)	Driver seat lumbar compressor motor (65500) +/ -
5	30-AH40 (RD/GN)	Voltage supplied at all times (overload protected)
6	–	not used

C362

14B719

Driver seat horizontal motor

F02071

Pin	Circuit	Circuit function
1	33-AH37 (YE/GN)	Driver seat horizontal motor +/ -
2	32-AH37 (WH/GN)	Driver seat horizontal motor +/ -

C363

14B719

Driver seat rear height motor



F02071

Pin	Circuit	Circuit function
1	33-AH41 (YE/VT)	Driver seat rear height motor +/ -
2	32-AH41 (WH/VT)	Driver seat rear height motor +/ -

C366

14C693

Driver seat lumbar compressor motor (65500)

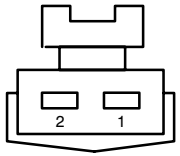

F02439

Pin	Circuit	Circuit function
1	33-AH39 (YE/BU)	Driver seat lumbar compressor motor (65500) +/-
2	32-AH39 (WH/BU)	Driver seat lumbar compressor motor (65500) +/-

C367

14K155

Side air bag module, left

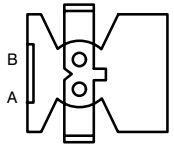

F02611

Pin	Circuit	Circuit function
A	30S-JA37 (RD/GN)	Side air bag module, left, signal
B	31S-JA37 (BK/GN)	Side air bag module, left, Signal return