C475 (BK)

14405

High mounted stop-lamp (13A613)

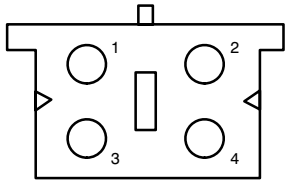

F04415

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground
3	54 (LG/YE)	Voltage supplied at all times (overload protected)
4	53 (BK/LB)	Interior lamp relay, switched power, output

C484 (BK)

19A178/14A411

Speaker, left rear (18808)

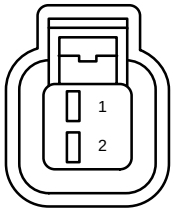

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C485 (BK)

13412/14A411

Speaker, right rear (18808)

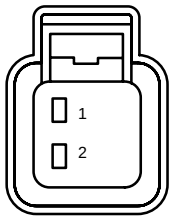

F02337

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

* with remote keyless entry

C508 (BK)

14631

Master window/door lock/unlock switch

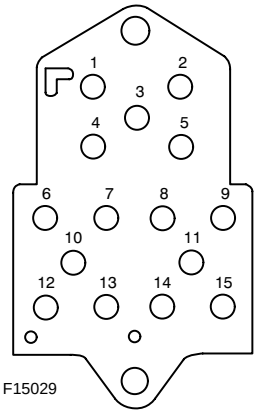

F15029

Pin	Circuit	Circuit function
1	124 (BN)	signal, feed
2	118 (PK/OG)	Door lock, feed
	*120 (PK/LG)	Door unlock, switch, input
3	517(BK/WH)	Voltage supplied at all times (overload protected), input
	*956(OG/LG)	Voltage supplied at all times (overload protected)
4	117 (PK/BK)	Door lock, output
	*119 (PK/YE)	Door lock switch
5	123 (RD)	Door lock, input
6	226 (WH/BK)	Power window switch, driver, feed
7	57 (BK)	Ground
8	314 (TN/LB)	Window switch, feed, right front, Up
9	57 (BK)	Ground
10	170 (RD/LB)	Battery voltage, hot in Run and Accessory only
11	170 (RD/LB)	Window lockout, switched power, output
12	57 (BK)	Ground
13	227 (YE)	Power window motor, left front, Down, feed
14	57 (BK)	Ground
15	313 (WH/YE)	Window switch, feed, right front, Down