C220b

14401

A30
Instrument cluster

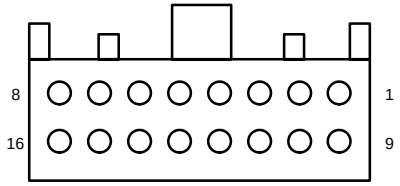

F16085

Pin	Circuit	Circuit function
1	140 (BK/PK)	Switched ground
2	1165 (WH/RD)	Switched, Ground
3	469 (LG)	Instrument cluster, feed, to, Safety belt buckle switch (10B924)
4	–	not used
5	1415 (LB/YE)	Switched, Ground
6	603 (DG)	Anti–lock brake indicator, control
7	398 (BK/YE)	Anti–lock brake indicator, control
8	784 (LB/BK)	Four–wheel drive, indicator, Low
9	–	not used
10	704 (DG/LG)	Voltage supplied in Start and Run (overload protected)
11	608 (BK/YE)	Air bag indicator, control
12	794 (LB)	Low coolant level switch, signal
13	3 (LG/WH)	Turn lamps, feed, left front
14	–	not used
15	203 (OG/LB)	Cruise set, indicator, control
16	162 (LG/RD)	Brake indicator, control

C220c

14401

A30
Instrument cluster

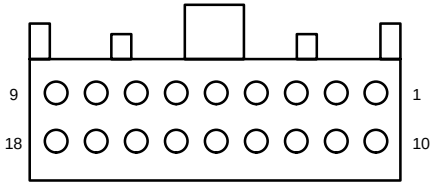

F18013

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
4	956 (OG/LG)	Voltage supplied at all times (overload protected)
5	57 (BK)	Ground
6	–	not used
7	914 (TN/OG)	SCP Bus +
8	915 (PK/LB)	SCP Bus –
9	919 (GY/BK)	Instrument illumination, feed
10	235 (RD/BK)	Front seats (power), input
11	–	not used
12	977 (VT/WH)	Brake indicator, control
13	–	not used
14	–	not used
15	2 (WH/LB)	Turn lamps, feed, right front
16	904 (LG/RD)	Generator/Battery indicator, control
17	253 (DG/WH)	Oil pressure switch (9278), input
18	19 (LB/RD)	Instrument illumination, feed