C788

14K024

N74
Heater mode switch



F04027

Pin	Circuit	Circuit function
1	15-FA27 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	15S-FA23 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
4	15S-FA13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C789

14K024

M3
Heater blower motor
(19805)

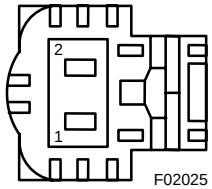

F02025

Pin	Circuit	Circuit function
1	15S-FA18 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	31S-FA18 (BK/RD)	J65, J1278

C798

14014

N22
Liftgate/decklid switch

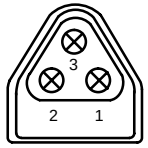

F03005

Pin	Circuit	Circuit function
1	31S-GL20A (BK/RD)	Ground, Switched
2	31S-LB26 (BK/OG)	Ground, Switched
3	31-LB26 (BK)	Ground

C803

9H589

B41
Camshaft position sensor (6B288)

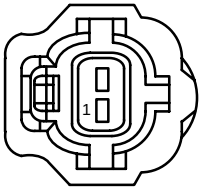

F02027

Pin	Circuit	Circuit function
1	8-RJ3 (WH/VT)	Sensor signal
2	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)