C810 (BK)

14K733

N1
Brake fluid level switch

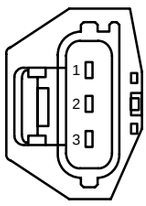

F03124

Pin	Circuit	Circuit Function
1	91-GC7 (BK/BU)	Ground
2	31S-GC6 (BK/YE)	Ground, switched
3	31S-GE44 (BK/RD)	Ground, switched

C811 (BK)

14014

H5
Anti–theft horn

F01005

Pin	Circuit	Circuit Function
1	29S-GL26 (OG/GN)	Voltage supplied at all times (overload protected), switched

C814 (BK)

14K733

B15
Wheel speed sensor, left front

F02005

Pin	Circuit	Circuit Function
1	8-CF32 (WH)	Sensor signal
2	7-CF32 (YE)	Voltage D.C. supplied at all times (sensor)

C815 (BK)

14K733

B14
Wheel speed sensor, right front

F02005

Pin	Circuit	Circuit Function
1	8-CF38 (WH/RD)	Sensor signal
2	7-CF38 (YE/RD)	Voltage D.C. supplied at all times (sensor)

C816 (BK)

14014

B17
Wheel speed sensor, left rear

F02005

Pin	Circuit	Circuit Function
1	8-CF34 (WH/BU)	Sensor signal
2	7-CF34 (YE/BU)	Voltage D.C. supplied at all times (sensor)

C817 (WH)

14014

B16
Wheel speed sensor, right rear

F02005

Pin	Circuit	Circuit Function
1	8-CF40 (WH/GN)	Sensor signal
2	7-CF40 (YE/GN)	Voltage D.C. supplied at all times (sensor)