C202b (GY)

13B319

Multifunction switch

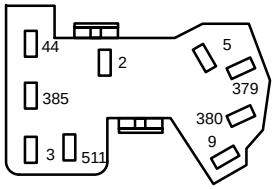

F09041

Pin	Circuit	Circuit function
2	2 (WH/LB)	Turn lamps, feed, right front
3	3 (LG/WH)	Turn lamps, feed, left front
5	5 (OG/LB)	Turn lamps, feed, right rear
9	9 (LG/OG)	Turn lamps, feed, left rear
44	44 (LB)	Electronic flasher module, output
379	–	not used
380	–	not used
385	385 (WH/RD)	Electronic flasher module, output
511	569 (DG)	Brake pedal position switch (13480), output

C205 (GY)

14401

Main light switch (11654)

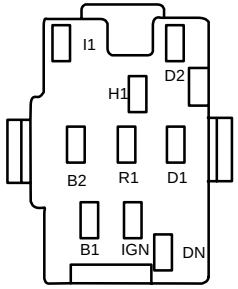

F09035

Pin	Circuit	Circuit function
B1	196 (DB/OG)	Voltage supplied at all times (overload protected)
B2	195 (TN/WH)	Voltage supplied at all times (overload protected)
D1	1006 (DG/WH)	Voltage supplied at all times (overload protected)
D2	706 (GY)	Main light switch (11654) signal Interior lamps
DN	–	not used
H1	15 (RD/YE)	Power, Hot with Headlamps on
I1	1045 (DB/WH)	Illumination dimmer, output
IGN	–	not used
R1	14 (BN)	Power, Exterior lamps

C207 (GY)

14401

Luggage compartment lid release switch



F02185

Pin	Circuit	Circuit function
1	84 (VT/YE)	Luggage compartment lid release relay, switched power, output
2	931 (OG)	Voltage supplied at all times (overload protected)