## Excursion

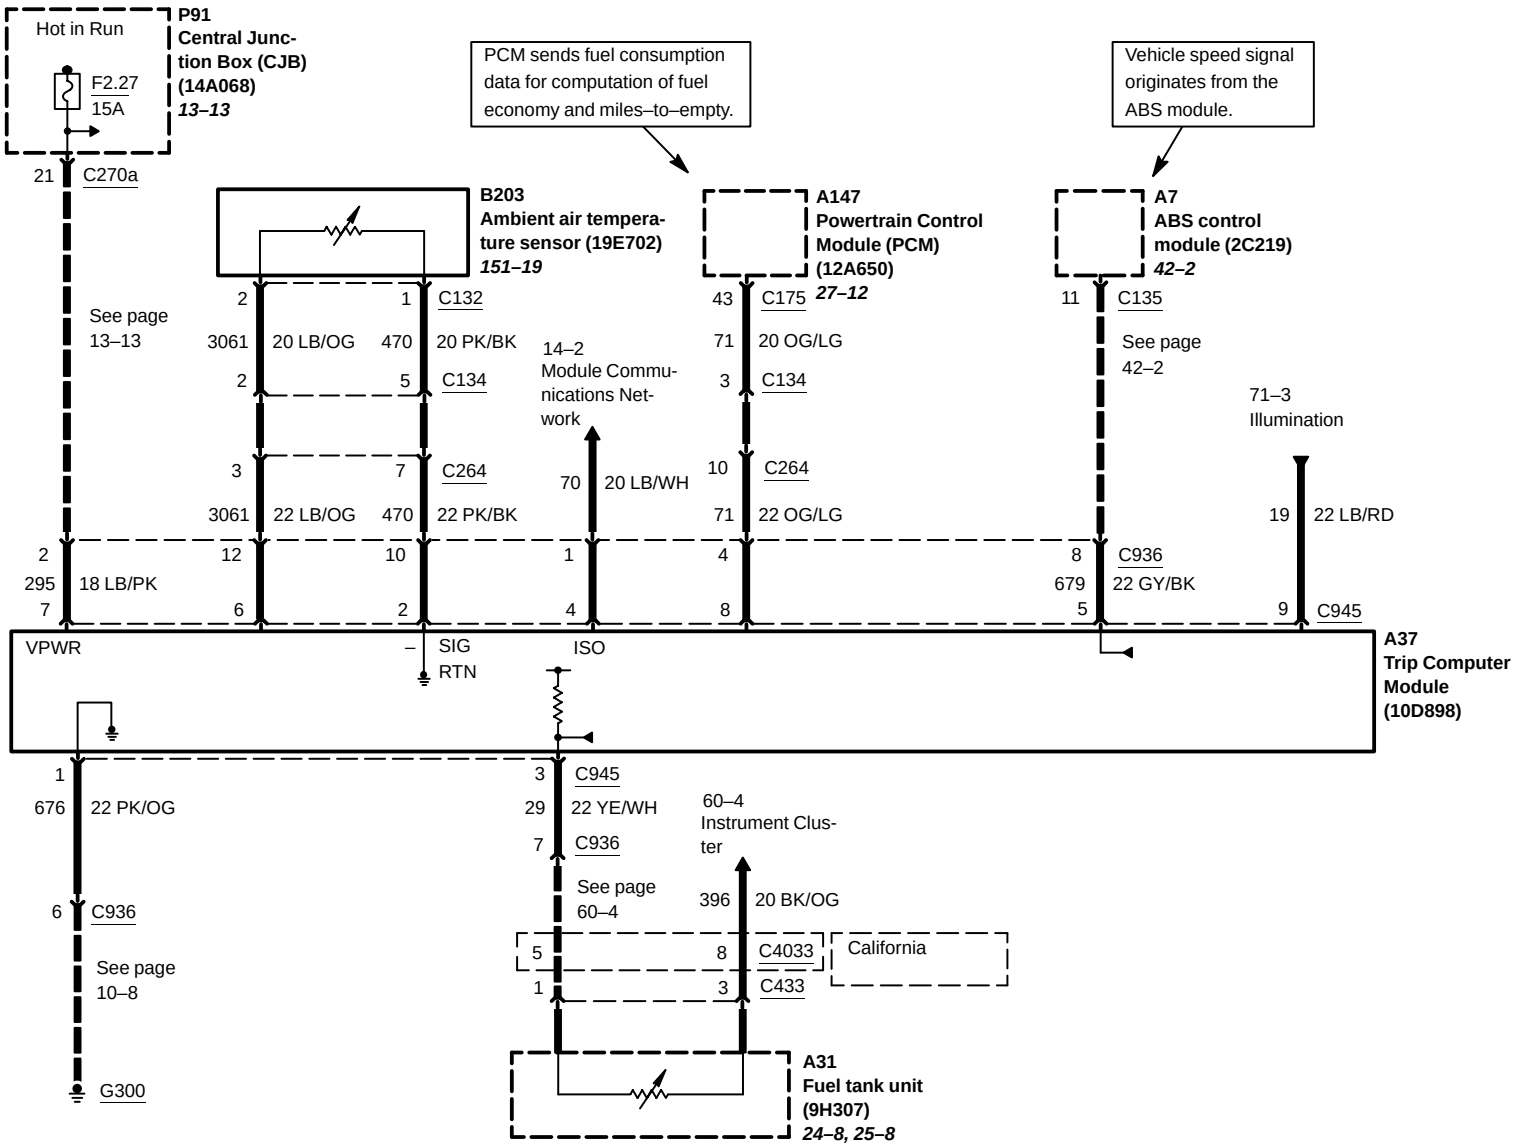
Hot in Run
F2.27
15A
P91
Central Junction Box (CJB)
(14A068)
13–13
21
C270a
See page 13–13
PCM sends fuel consumption data for computation of fuel economy and miles–to–empty.
Vehicle speed signal originates from the ABS module.
B203
Ambient air temperature sensor (19E702)
151–19
A147
Powertrain Control Module (PCM)
(12A650)
27–12
A7
ABS control module (2C219)
42–2
2
1
C132
3061
20 LB/OG
470
20 PK/BK
2
5
C134
43
C175
71
20 OG/LG
3
C134
11
C135
See page 42–2
14–2
Module Communications Network
71–3
Illumination
3
7
C264
70
20 LB/WH
10
C264
19
22 LB/RD
3061
22 LB/OG
470
22 PK/BK
71
22 OG/LG
2
295
7
18 LB/PK
12
6
10
2
1
4
4
8
8
679
5
C936
22 GY/BK
9
C945
VPWR
SIG RTN
ISO
A37
Trip Computer Module
(10D898)
1
676
22 PK/OG
6
C936
See page 10–8
G300
3
C945
29
22 YE/WH
7
C936
60–4
Instrument Cluster
See page 60–4
396
20 BK/OG
5
1
8
3
C4033
C433
California
A31
Fuel tank unit
(9H307)
24–8, 25–8