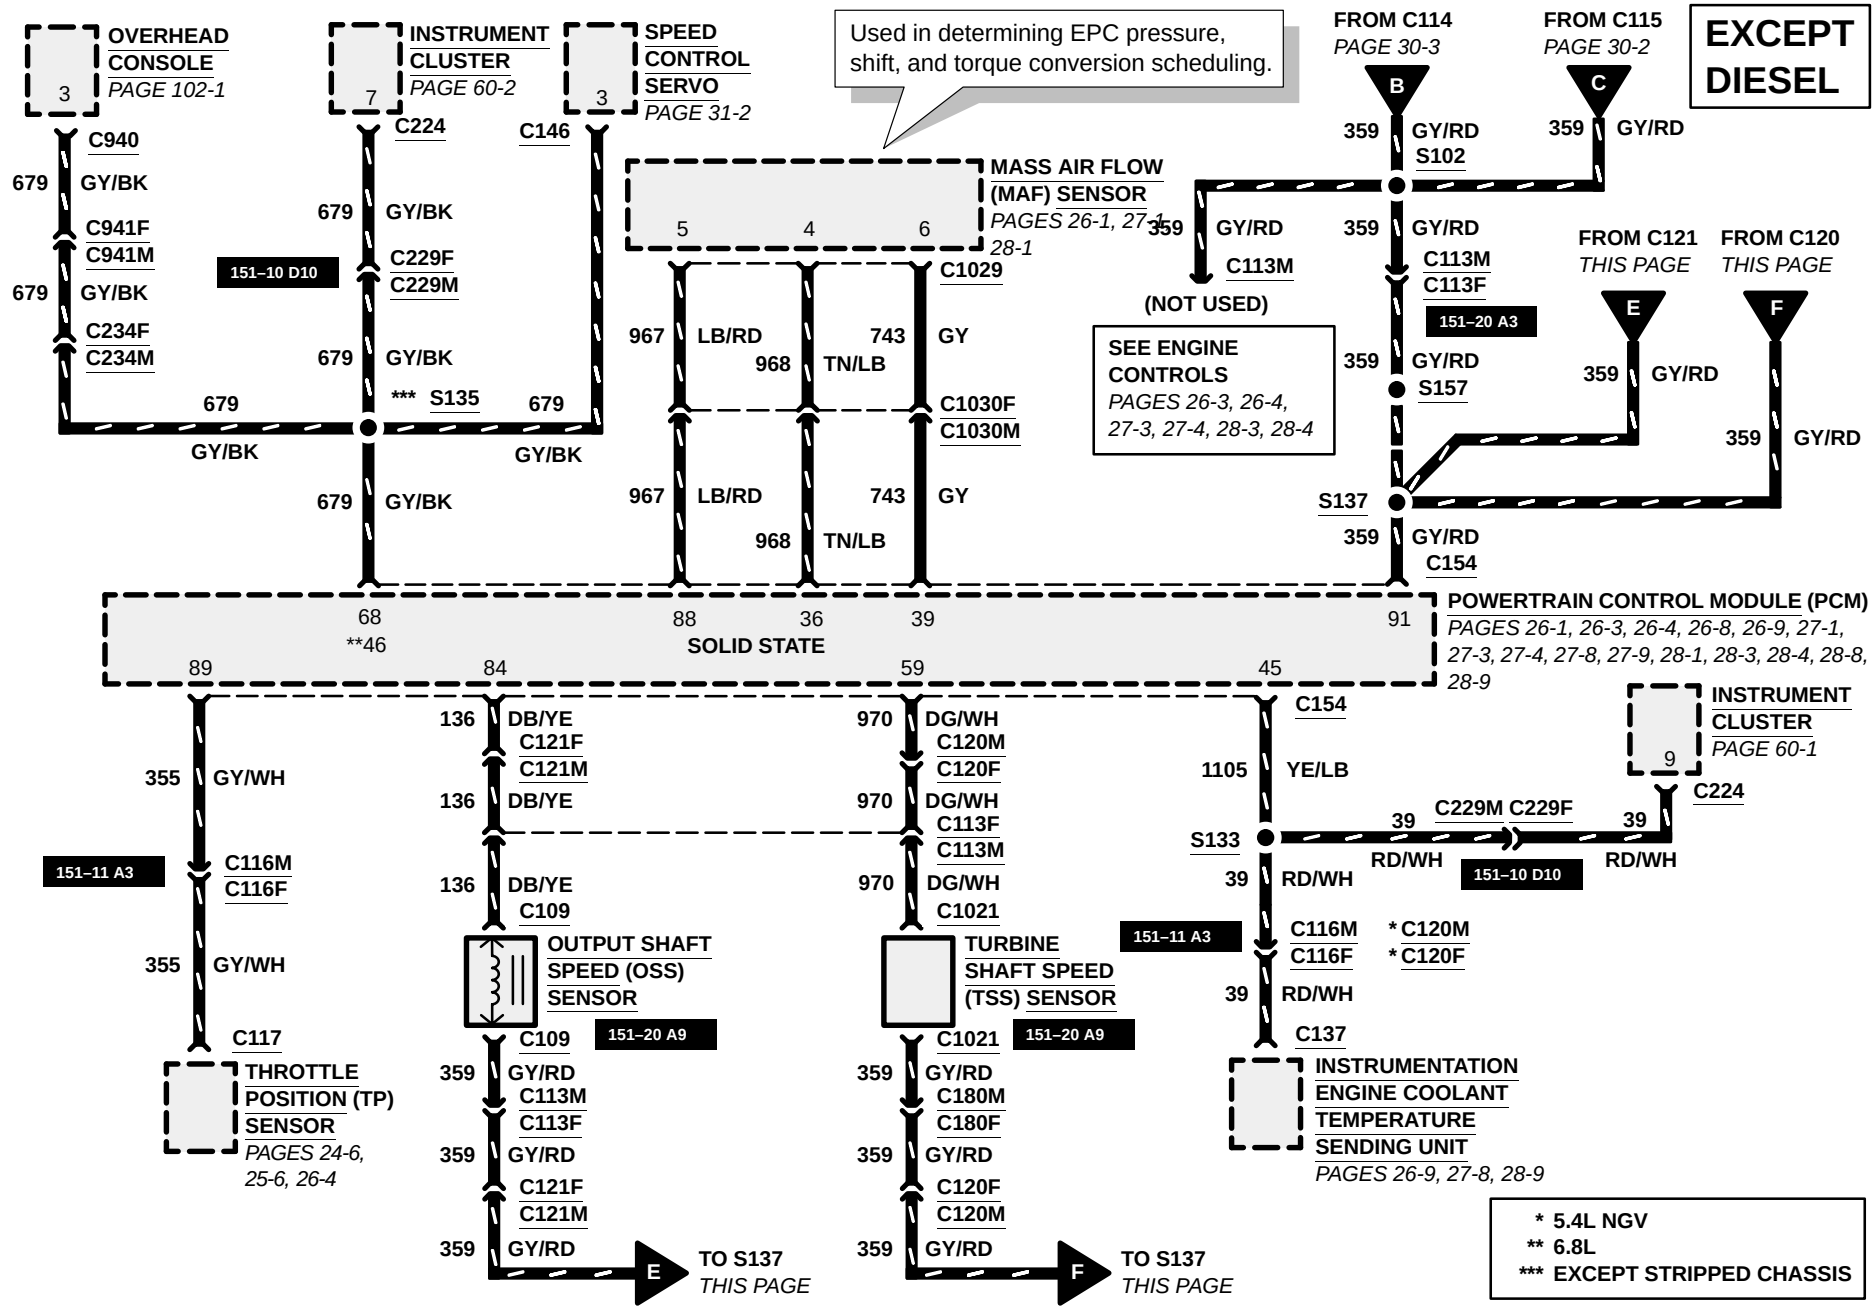
EXCEPT DIESEL
OVERHEAD CONSOLE
PAGE 102-1
INSTRUMENT CLUSTER
PAGE 60-2
SPEED CONTROL SERVO
PAGE 31-2
Used in determining EPC pressure, shift, and torque conversion scheduling.
FROM C114
PAGE 30-3
FROM C115
PAGE 30-2
C940
679 GY/BK
C941F
C941M
679 GY/BK
C234F
C234M
679 GY/BK
151–10 D10
C224
679 GY/BK
C229F
C229M
679 GY/BK
679 GY/BK
679 GY/BK
*** S135
679 GY/BK
C146
MASS AIR FLOW (MAF) SENSOR
PAGES 26-1, 27-1, 28-1
5 4 6
C1029
967 LB/RD
968 TN/LB
743 GY
C1030F
C1030M
967 LB/RD
968 TN/LB
743 GY
359 GY/RD
C113M
(NOT USED)
SEE ENGINE CONTROLS
PAGES 26-3, 26-4, 27-3, 27-4, 28-3, 28-4
B
359 GY/RD
S102
359 GY/RD
C113M
C113F
151–20 A3
359 GY/RD
S157
S137
359 GY/RD
C154
C
359 GY/RD
FROM C121
THIS PAGE
FROM C120
THIS PAGE
E
359 GY/RD
F
359 GY/RD
POWERTRAIN CONTROL MODULE (PCM)
PAGES 26-1, 26-3, 26-4, 26-8, 26-9, 27-1, 27-3, 27-4, 27-8, 27-9, 28-1, 28-3, 28-4, 28-8, 28-9
68
**46
88
36
39
91
SOLID STATE
89
84
59
45
355 GY/WH
151–11 A3
C116M
C116F
355 GY/WH
C117
THROTTLE POSITION (TP) SENSOR
PAGES 24-6, 25-6, 26-4
136 DB/YE
C121F
C121M
136 DB/YE
136 DB/YE
C109
OUTPUT SHAFT SPEED (OSS) SENSOR
C109
151–20 A9
359 GY/RD
C113M
C113F
359 GY/RD
C121F
C121M
359 GY/RD
E
TO S137
THIS PAGE
970 DG/WH
C120M
C120F
970 DG/WH
C113F
C113M
970 DG/WH
C1021
TURBINE SHAFT SPEED (TSS) SENSOR
C1021
151–20 A9
359 GY/RD
C180M
C180F
359 GY/RD
C120F
C120M
359 GY/RD
F
TO S137
THIS PAGE
C154
1105 YE/LB
S133
39 RD/WH
151–11 A3
C116M
C116F
39 RD/WH
C137
INSTRUMENTATION ENGINE COOLANT TEMPERATURE SENDING UNIT
PAGES 26-9, 27-8, 28-9
INSTRUMENT CLUSTER
PAGE 60-1
9
C224
39 C229M C229F 39
RD/WH
RD/WH
151–10 D10
* C120M
* C120F
* 5.4L NGV
** 6.8L
*** EXCEPT STRIPPED CHASSIS