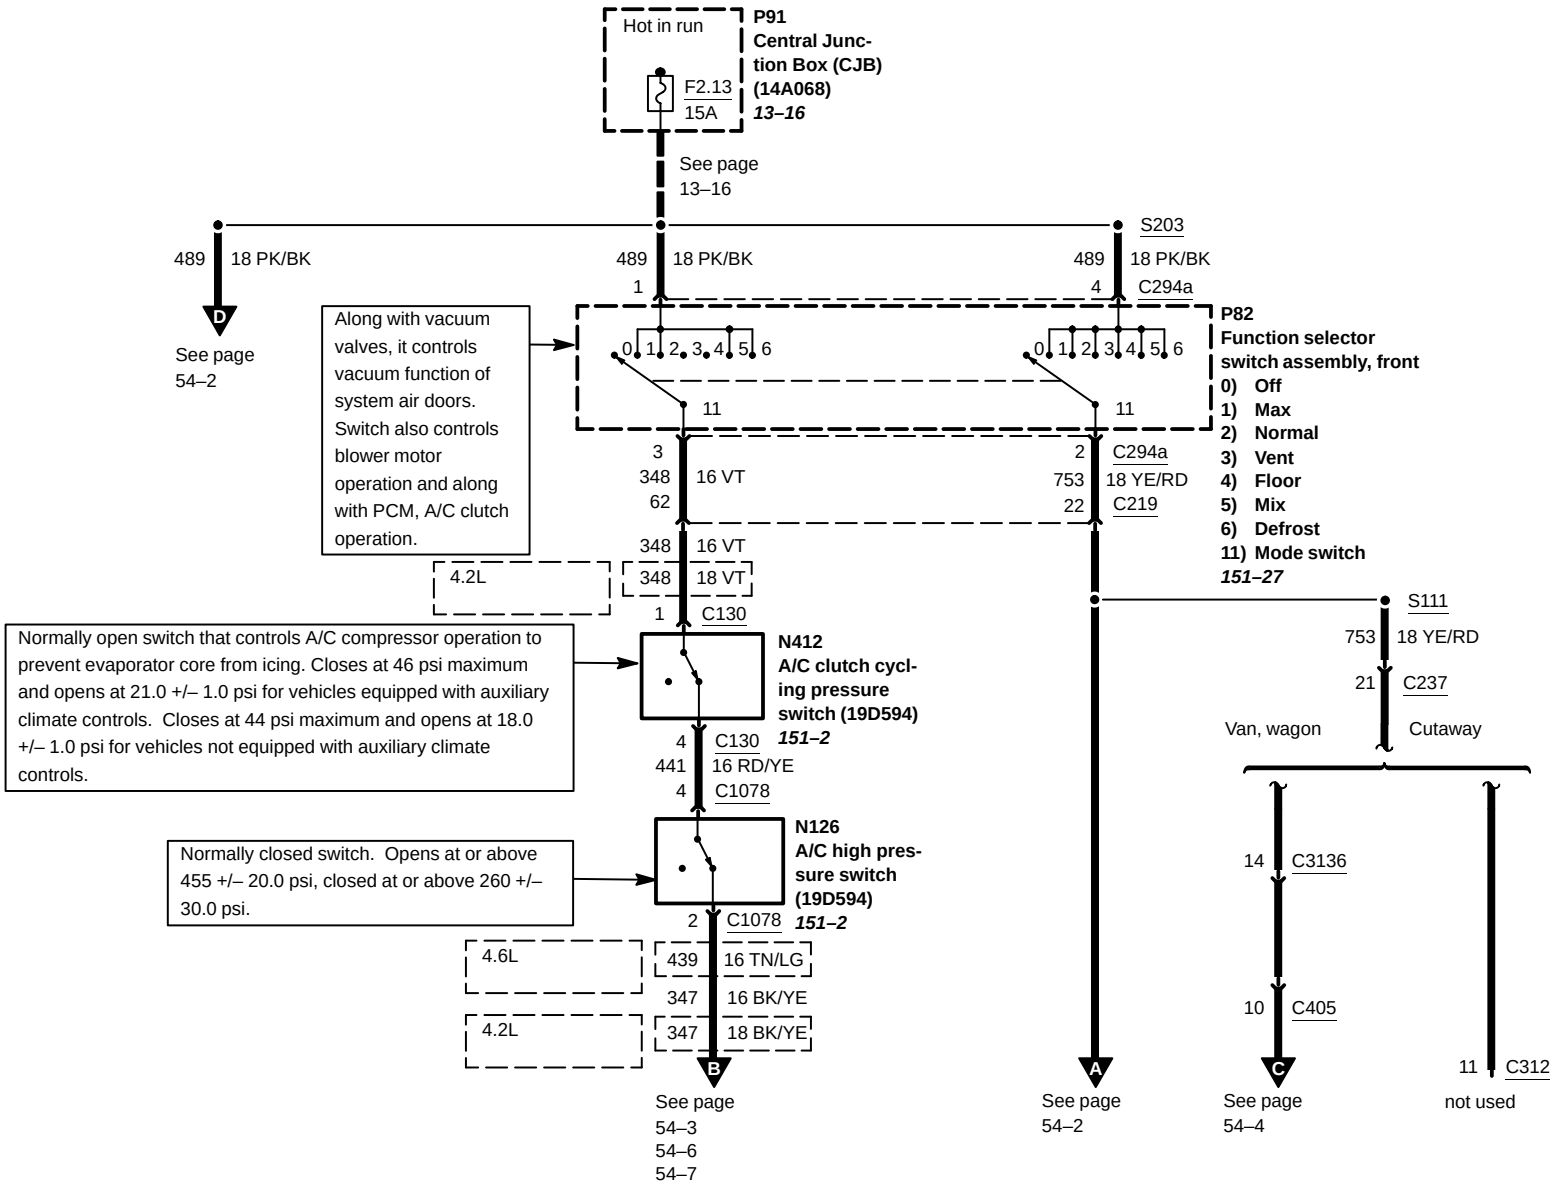
Hot in run
F2.13
15A
P91
Central Junction Box (CJB)
(14A068)
13–16
See page 13–16
489 18 PK/BK
D
See page 54–2
489 18 PK/BK
1
S203
489 18 PK/BK
4 C294a
Along with vacuum valves, it controls vacuum function of system air doors. Switch also controls blower motor operation and along with PCM, A/C clutch operation.
0 1 2 3 4 5 6
11
P82
Function selector switch assembly, front
0) Off
1) Max
2) Normal
3) Vent
4) Floor
5) Mix
6) Defrost
11) Mode switch
151–27
3
348
62
16 VT
2 C294a
753 18 YE/RD
22 C219
348 16 VT
4.2L
348 18 VT
1 C130
Normally open switch that controls A/C compressor operation to prevent evaporator core from icing. Closes at 46 psi maximum and opens at 21.0 +/– 1.0 psi for vehicles equipped with auxiliary climate controls. Closes at 44 psi maximum and opens at 18.0 +/– 1.0 psi for vehicles not equipped with auxiliary climate controls.
N412
A/C clutch cycling pressure switch (19D594)
151–2
4 C130
441 16 RD/YE
4 C1078
Normally closed switch. Opens at or above 455 +/– 20.0 psi, closed at or above 260 +/– 30.0 psi.
N126
A/C high pressure switch (19D594)
151–2
2 C1078
4.6L
439 16 TN/LG
347 16 BK/YE
4.2L
347 18 BK/YE
B
See page 54–3 54–6 54–7
S111
753 18 YE/RD
21 C237
Van, wagon
Cutaway
14 C3136
10 C405
C
See page 54–4
11 C312
not used
A
See page 54–2