C3041a

18B864

Subwoofer amplifier
(18C804)

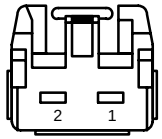

F02251

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	829 (WH/VT)	Voltage supplied at all times (overload protected)

C3041b

18B864

Subwoofer amplifier
(18C804)

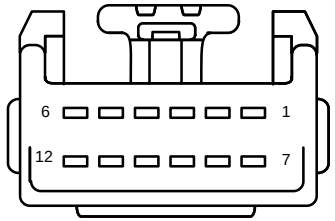

F12075

Pin	Circuit	Circuit function
1	176 (PK/LG)	Subwoofer +
2	179 (OG/RD)	Subwoofer –
3	–	not used
4	–	not used
5	–	not used
6	813 (LB/WH)	Speaker, left, front –
7	805 (WH/LG)	Speaker, right, front +
8	–	not used
9	173 (DG/VT)	Radio (18806), – Subwoofer, High, mute
10	–	not used
11	811 (DG/OG)	Speaker, right, front –
12	804 (OG/LG)	Speaker, left, front +

C3041c

18B864

Subwoofer amplifier
(18C804)

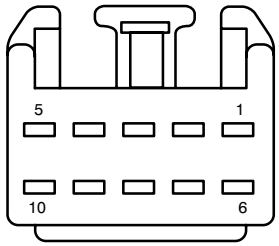

F10063

Pin	Circuit	Circuit function
1	168 (RD/BK)	Radio (18806), input, Subwoofer –
2	–	not used
3	820 (DB/YE)	Radio (18806), input, Speaker, left front (18808) +
4	816 (LG/VT)	Radio (18806), input, Speaker, right front (18808) +
5	819 (LG/WH)	Radio (18806), input, Speaker, left front (18808) –
6	–	not used
7	815 (LG/OG)	Radio (18806), input, Speaker, right front (18808) –
8	167 (BN/OG)	Radio (18806), input, Subwoofer +
9	–	not used
10	–	not used

C3065 (BK)

14A005

Safety belt buckle
switch, driver



F02383

Pin	Circuit	Circuit function
1	469 (LG)	Safety belt switch, feed
2	570 (BK/WH)	Ground