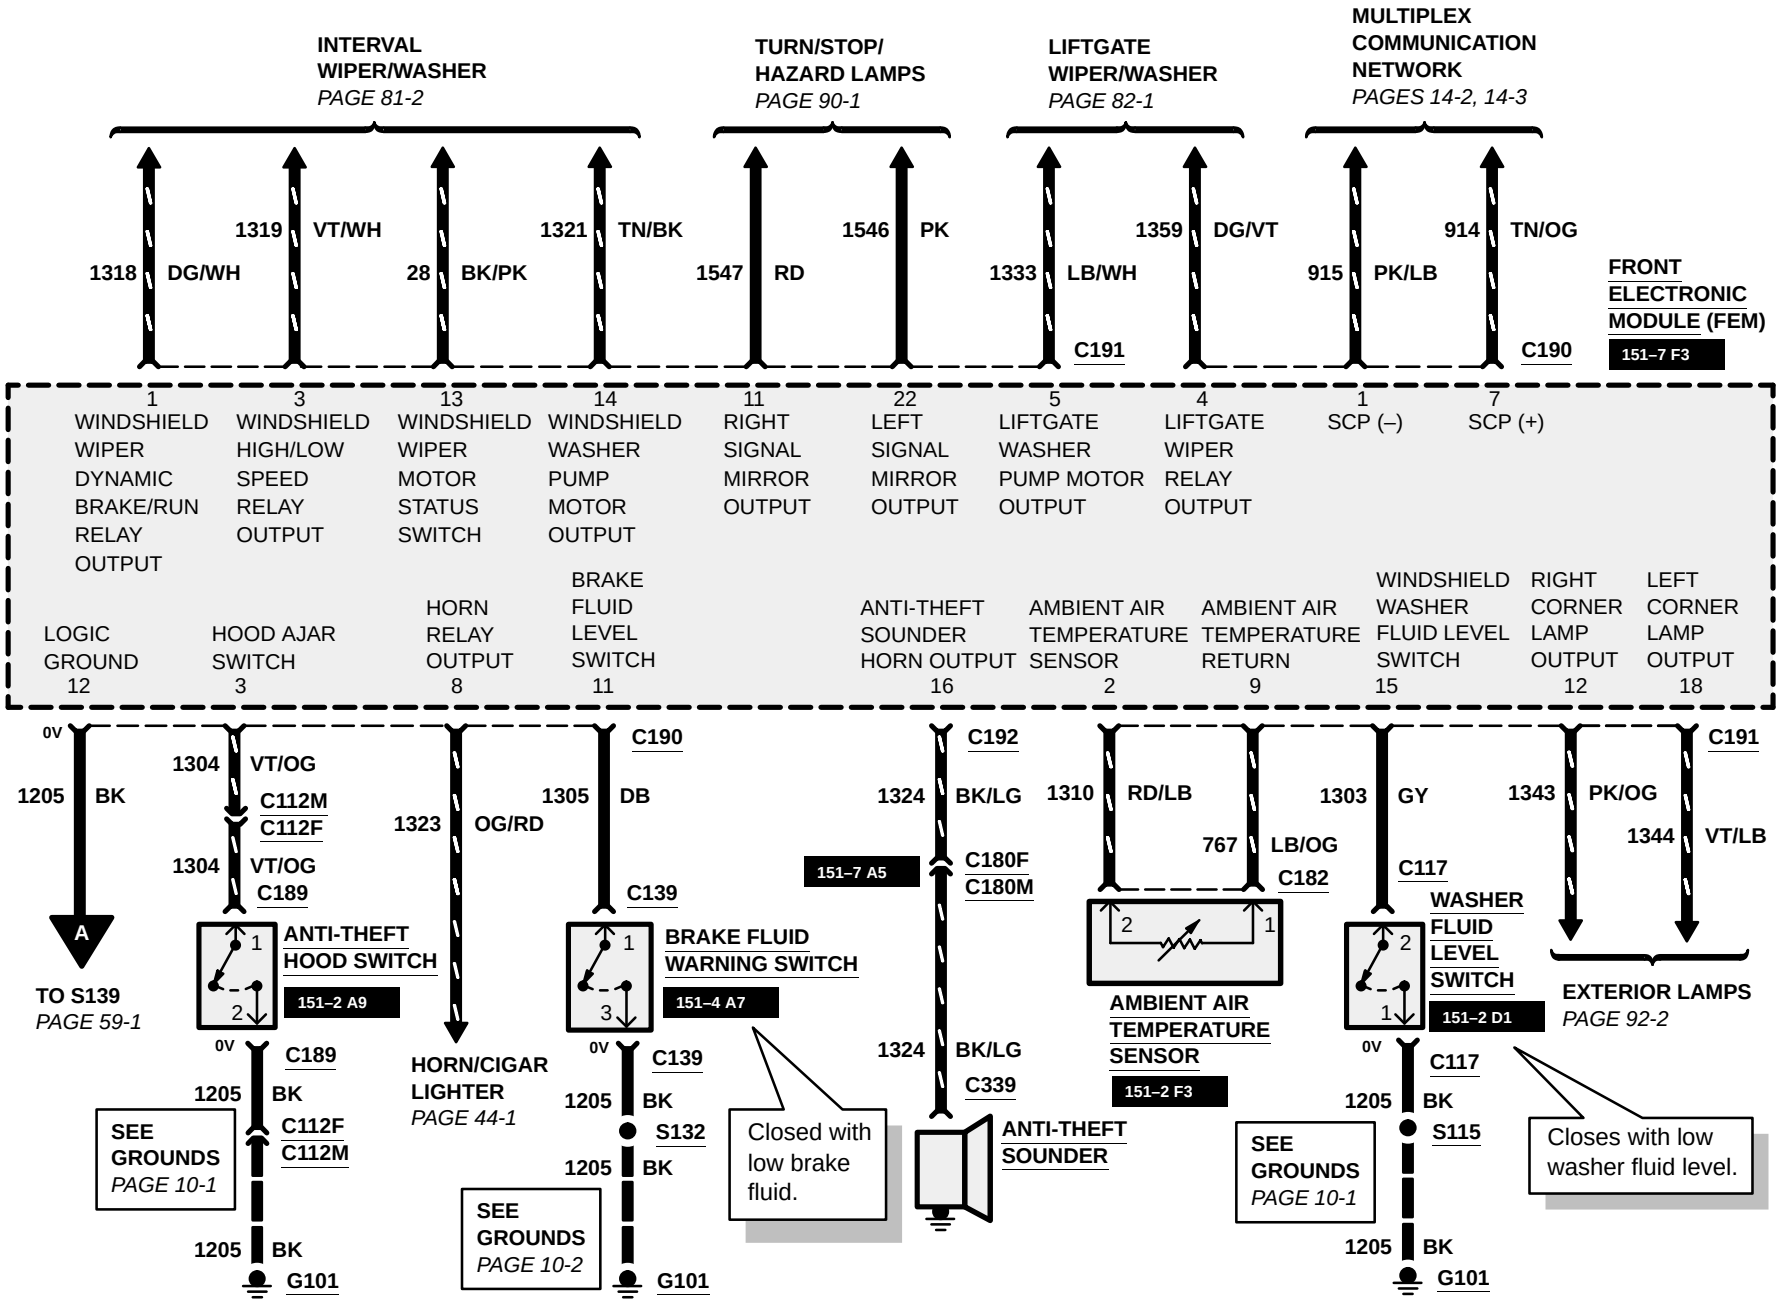
INTERVAL WIPER/WASHER
PAGE 81-2
TURN/STOP/ HAZARD LAMPS
PAGE 90-1
LIFTGATE WIPER/WASHER
PAGE 82-1
MULTIPLEX COMMUNICATION NETWORK
PAGES 14-2, 14-3
1318 DG/WH
1319 VT/WH
28 BK/PK
1321 TN/BK
1547 RD
1546 PK
1333 LB/WH
1359 DG/VT
915 PK/LB
914 TN/OG
C191
C190
FRONT ELECTRONIC MODULE (FEM)
151–7 F3
1 WINDSHIELD WIPER DYNAMIC BRAKE/RUN RELAY OUTPUT
3 WINDSHIELD HIGH/LOW SPEED RELAY OUTPUT
13 WINDSHIELD WIPER MOTOR STATUS SWITCH
14 WINDSHIELD WASHER PUMP MOTOR OUTPUT
11 RIGHT SIGNAL MIRROR OUTPUT
22 LEFT SIGNAL MIRROR OUTPUT
5 LIFTGATE WASHER PUMP MOTOR OUTPUT
4 LIFTGATE WIPER RELAY OUTPUT
1 SCP (–)
7 SCP (+)
LOGIC GROUND 12
HOOD AJAR SWITCH 3
HORN RELAY OUTPUT 8
BRAKE FLUID LEVEL SWITCH 11
ANTI-THEFT SOUNDER HORN OUTPUT 16
AMBIENT AIR TEMPERATURE SENSOR 2
AMBIENT AIR TEMPERATURE RETURN 9
WINDSHIELD WASHER FLUID LEVEL SWITCH 15
RIGHT CORNER LAMP OUTPUT 12
LEFT CORNER LAMP OUTPUT 18
0V
1205 BK
A
TO S139
PAGE 59-1
1304 VT/OG
C112M
C112F
1304 VT/OG
C189
ANTI-THEFT HOOD SWITCH
151–2 A9
0V
C189
1205 BK
C112F
C112M
1205 BK
G101
SEE GROUNDS
PAGE 10-1
1323 OG/RD
HORN/CIGAR LIGHTER
PAGE 44-1
SEE GROUNDS
PAGE 10-2
C190
1305 DB
C139
BRAKE FLUID WARNING SWITCH
151–4 A7
0V
C139
1205 BK
S132
1205 BK
G101
Closed with low brake fluid.
C192
1324 BK/LG
151–7 A5
C180F
C180M
1324 BK/LG
C339
ANTI-THEFT SOUNDER
1310 RD/LB
767 LB/OG
C182
AMBIENT AIR TEMPERATURE SENSOR
151–2 F3
SEE GROUNDS
PAGE 10-1
1303 GY
C117
WASHER FLUID LEVEL SWITCH
151–2 D1
0V
C117
1205 BK
S115
1205 BK
G101
Closes with low washer fluid level.
1343 PK/OG
1344 VT/LB
C191
EXTERIOR LAMPS
PAGE 92-2