C103

12B637

Oil pressure switch
(9278)

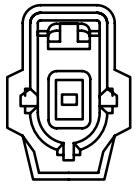

F01016

Pin	Circuit	Circuit function
1	8-GC21 (WH/GN)	Sensor signal

C104

12B637

Engine Oil Temperature (EOT) sensor

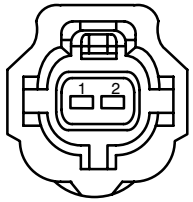

F02027

Pin	Circuit	Circuit function
1	8-RJ26 (WH/VT)	Sensor signal
2	9-RJ26 (BN/GN)	Sensor signal return (reference/ground)

C106

12B637

Fuel rail pressure transducer sensor

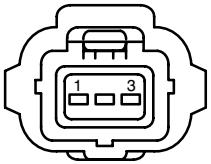

F03098

Pin	Circuit	Circuit function
1	7-RJ11 (YE/GN)	Voltage DC supplied at all times (sensor)
2	9-RJ11 (BN/GN)	Sensor signal return (reference/ground)
3	8-RJ11 (WH/GN)	Sensor signal

C107

12B637

Cylinder–head temperature sensor
(6G004)

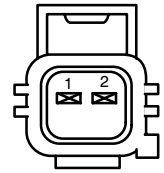

F02107

Pin	Circuit	Circuit function
1	9-RJ33 (BN/WH)	Sensor signal return (reference/ground)
2	8-RJ33 (WH/VT)	Sensor signal

C108

12B637

Knock sensor 2
(6G004)

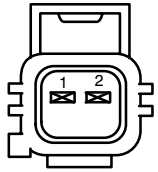

F02107

Pin	Circuit	Circuit function
1	8-RJ19 (WH/RD)	Sensor signal
2	10-RJ19 (GY/RD)	Signal 2 (Y–direction, reverse, downward)

C109

12B637

Knock sensor 1
(6G004)

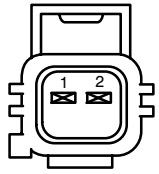

F02107

Pin	Circuit	Circuit function
1	8-RJ18 (WH/BK)	Sensor signal
2	10-RJ18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)