C286

19A657

B72
Sunload sensor
(19E663)

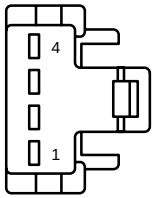

F04145

Pin	Circuit	Circuit function
1	10-FA53 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
2	9-FA53 (BN/BU)	Sensor signal return (reference/ground)
3	8-FA53 (WH/BU)	Sensor signal
4	–	not used

C287

19A657

B202
Autolamp sensor

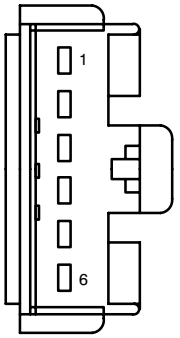

F06086

Pin	Circuit	Circuit function
1	31-LE42 (BK)	Ground
2	10-GL6 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
3	29-GL6 (OG)	Voltage supplied at all times (overload protected)
4	8-LE42 (WH/BU)	Sensor signal
5	–	not used
6	15-LE42 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C288

19D887

M3
Heater blower motor
(19805)

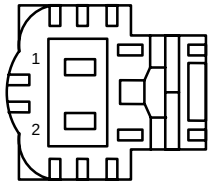

F02025

Pin	Circuit	Circuit function
1	31S-FA18 (BK/RD)	Ground, Switched
2	30S-FA18 (RD/BK)	Voltage supplied at all times (not overload protected), Switched