C106 (BK)

14B527

Fuel rail pressure transducer sensor

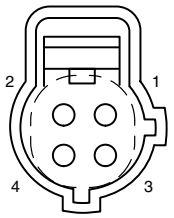

F04253

Pin	Circuit	Circuit function
1	1160 (BN/WH)	signal, return
2	1163 (BN)	Reference voltage
3	2187 (BN/OG)	Fuel rail pressure transducer sensor, signal
4	–	not used

C107 (WH)

14B102/9D930

Cylinder–head temperature sensor (6G004)

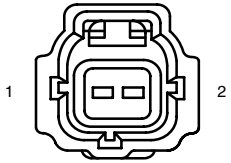

F02111

Pin	Circuit	Circuit function
1	1102 (YE/LG)	Cylinder–head temperature sensor (6G004), signal
2	359 (GY/RD)	signal, return

C108 (BK)

9D930

Knock sensor (12A699)



F02221

Pin	Circuit	Circuit function
1	310 (YE/RD)	Knock sensor (12A699) +
2	311 (DG/VT)	Knock sensor (12A699) –

C109 (BK)

12B637

Knock sensor (12A699)

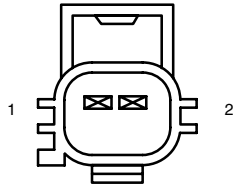

F02066

Pin	Circuit	Circuit function
1	311 (DG/VT)	Knock sensor (12A699) –
2	310 (YE/RD)	Knock sensor (12A699) +