C602a

14630

N240
Door ajar switch, passenger side front

F01065

Pin	Circuit	Circuit Function
1	761 (GY/RD)	Door ajar switch, right front

C602b

14630

N240
Door ajar switch, passenger side front

F01067

Pin	Circuit	Circuit Function
1	57 (BK)	Ground

C603 (GY)

14630

M226
Door lock actuator, passenger side

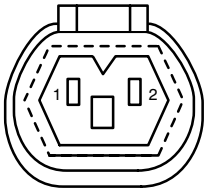

F02227

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C604 (GY)

14630

N105
Window adjust switch, passenger side

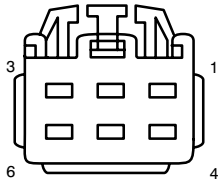

F06213

Pin	Circuit	Circuit Function
1	314 (TN/LB)	Window switch, feed, right front, Down
2	334 (RD/YE)	Window motor, feed, Down
3	400 (LB/BK)	Window safety relay, switched power, output
	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	333 (YE/RD)	Window motor, feed, Up
6	313 (WH/YE)	Window switch, feed, right front, Up