C220b

14401

Instrument cluster

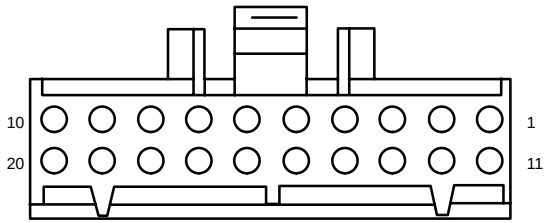

F20059

Pin	Circuit	Circuit function
1	506 (RD)	Electronic Automatic Temperature Control (EATC) module (19980)
2	–	not used
3	143 (LB/YE)	Message center switch #1, feed
4	39 (RD/WH)	Engine Coolant Temperature (ECT) sensor (12A648), input
5	1907 (WH/LG)	check fuel cap indicator
6	29 (YE/WH)	Fuel pump/fuel gauge sender
7	54 (LG/YE)	Voltage supplied at all times (overload protected)
8	676 (PK/OG)	Ground
9	88 (BK/WH)	Voltage in Run (overload protected)
10	82 (PK/YE)	Low washer fluid indicator
11	205 (DB/LG)	Low fuel indicator
12	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
13	19 (LB/RD)	Instrument illumination, feed
14	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
15	–	not used
16	–	not used
17	344 (BK/YE)	Door ajar indicator
18	1270 (OG/RD)	cylinder head Temperature indicator Lamp
19	183 (TN/YE)	tone driver
20	–	not used

C220c

14401

Instrument cluster

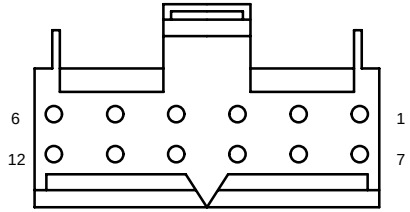

F12018

Pin	Circuit	Circuit function
1	676 (PK/OG)	Ground
2	88 (BK/WH)	Voltage in Run (overload protected)
3	484 (OG/BK)	Interior lamps, feed
4	12 (LG/BK)	High beam lamp Power, feed
5	2 (WH/LB)	Turn lamps, feed, right front
6	3 (LG/WH)	Turn lamps, feed, left front
7	88 (BK/WH)	Voltage in Run (overload protected)
8	31 (WH/RD)	Engine oil pressure indicator, control
9	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
10	584 (YE)	Generator/Battery indicator, control
11	450 (DG/LG)	Safety belt indicator, feed
12	939 (VT)	traction assist, indicator, Lamp