C165

7C078

B110
Output shaft speed sensor (OSS)

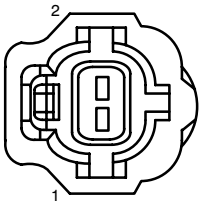

F02027

Pin	Circuit	Circuit Function
1	8-TA51 (WH/RD)	Sensor signal
2	9-TA51 (BN/RD)	Sensor signal return (reference/ ground)

C167

7C078

B234
Digital Transmission Range (DTR) sensor

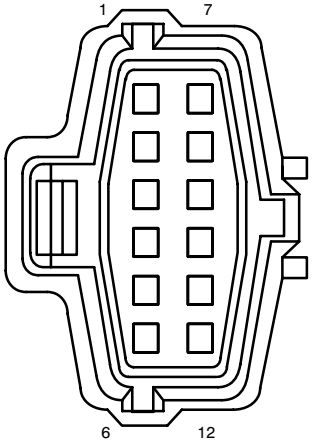

F12040

Pin	Circuit	Circuit Function
1	–	not used
2	9-TA18 (BN/YE)	Sensor signal return (reference/ ground)
3	8-TA37 (WH)	Sensor signal
4	8-TA40 (WH/GN)	Sensor signal
5	8-TA39 (WH/BU)	Sensor signal
6	8-TA38 (WH/RD)	Sensor signal
7	–	not used
8	–	not used
9	–	not used
10	50-BB15 (GY/OG)	Voltage, ignition switch in Start (not overload protected)
11	–	not used
12	50S-BB12 (GY)	Voltage, ignition switch in Start (not overload protected), Switched

C168

7C078

A239
Automatic transmission

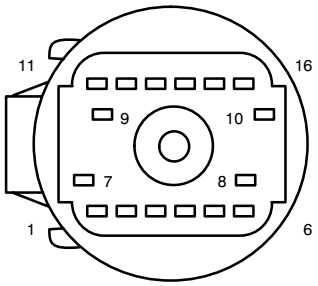

F16053

Pin	Circuit	Circuit Function
1	91S-TA63 (BN/GN)	Ground, Switched
2	8-TA26 (WH/RD)	Sensor signal
3	15S-TA36 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
4	91S-TA64 (BN/YE)	Ground, Switched
5	91S-TA70 (BN/YE)	Ground, Switched
6	91S-TA69 (BN/WH)	Ground, Switched
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	91S-TA65 (BN/WH)	Ground, Switched
12	9-TA36 (BN/GN)	Sensor signal return (reference/ ground)
13	8-TA71 (WH/BU)	Sensor signal
14	91S-TA47 (BN/WH)	Ground, Switched
15	91S-TA24 (BN/RD)	Ground, Switched
16	91S-TA23 (BN)	Ground, Switched