C2040

14401

Accelerator pedal position sensor

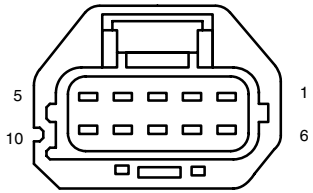

F10105

* 7.3L
** 6.0L

Pin	Circuit	Circuit function
1	–	not used
2	**3075 (YE)	position sense 2
3	**57 (BK)	Ground
4	**351 (BN/WH)	Reference voltage
5	**3093 (WH/LB)	Reference voltage 2
6	*640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
6	**57 (BK)	Ground
7	*1285 (RD/LG)	position sense
7	**3091 (LB/BK)	position sense 1
8	*355 (GY/WH)	signal +
8	**3076 (YE/WH)	position sense 3
9	*357 (YE/WH)	signal –
9	**359 (GY/RD)	Signal return
10	*351 (BN/WH)	Reference voltage
10	**3094 (LB/RD)	Signal return 2